

part number: 09163186 (GM) / 93181287 (Vauxhall)



RÖMER DUO plus

Instructions

Please read through these instructions carefully before using your RÖMER DUO plus.

Contents

1. Test, certification, suitability	1
2. Use in the vehicle	1
2.1. with ISOFIX fastening	2
2.2. with ISOFIX fastening and <i>TopTether</i> * anchorage	2
2.3. without ISOFIX fastening (universal)	2
3. Installation and removal in the vehicle	3
3.1. with ISOFIX fastening	3
3.2. with ISOFIX fastening and <i>TopTether</i> anchoring	6
3.3. without ISOFIX fastening (universal)	10
4. Securing your child	12
4.1. Adjusting the shoulder belts	12
4.2. Loosening the harness	13
4.3. Tightening the harness	13
4.4. Buckling up the child	13
4.5. Function of the buckle	14
5. Checklist for correct securing of your child	15
6. Sitting / Resting / Sleeping - Adjustable seat shell	16
7. General instructions	16
8. Care instructions	17
8.1. Removing the cover	18
8.2. Refitting the cover	19
8.3. Removing the belts (left and right)	20
8.4. Refitting of the belts (left and right)	22
9. Tips regarding Disposal	24
10. Next child safety seat	24
11. Guarantee Card / Transfer-Check	26

1. Test, certification, suitability

Child safety seat	Test and certification to ECE* R 44/03		
	Group	Body weight	Age range (approx.)
RÖMER DUO plus	I	9 to 18 kg	8 months to 4 years

*ECE = European Standard for Safety Equipment

2. Use in the vehicle

The RÖMER DUO plus is approved for three different kinds of installation:



with ISOFIX fastening



with ISOFIX fastening and
*TopTether** anchorage



without ISOFIX fastening
(universal)



2.1. with ISO FIX fastening

Important:

The fastening with ISO FIX requires a **vehicle-specific approval**. Please make sure you study the enclosed list of approved vehicles, which is continuously supplemented. If required, we can send you the latest list of approved vehicles. Or visit our website <http://www.britax-roemer.de>.

forward facing	yes
on seats with: ISO FIX fastening points (between seat and backrest)	yes



2.2. with ISO FIX fastening and TopTether* anchorage



Important:

The fastening with ISO FIX and *TopTether** requires a **vehicle-specific approval**. Please make sure you study the enclosed list of approved vehicles, which is continuously supplemented. If required, we can send you the latest list of approved vehicles. Or visit our website: <http://www.britax-roemer.de>.

*TopTether = Strap for additional fastening
(not standard, also available as aftermarket accessory)


forward facing	yes
on seats with: ISO FIX fastening points (between seat and backrest) and TopTether anchorage points (on the rear shelf or on the floor or behind the backrest)	yes



2.3. without ISO FIX fastening (universal)

- 1) approved to ECE R 16 (or comparable standard), e.g. can be seen on test label with encircled "E", "e" on the belt.
- 2) use only permissible on a rearward facing vehicle seat (for instance in a van / minibus) which is also approved for the transport of adults. Airbag must not act upon the seat.
- 3) for passenger seat with front-airbag, slide vehicle seat far back; additionally, follow the instructions in the vehicle manual.
- 4) use only possible if vehicle seat equipped with 3-point belt.
- 5) The use of a 2-point belt increases the risk of injuring your child in an accident substantially.

forward facing	yes
rearward facing	no 2)
with 2-point belt	no 5)
with 3-point belt 1)	yes
on passenger seat	yes 3)
on outer rear seats	yes
on centre rear seat	no 4)

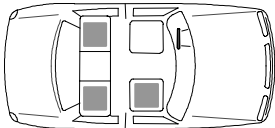

Please observe the general recommendations of your vehicle manual for the use of child seats, especially with regard to airbags.

3. Installation and removal in the vehicle





3.1. with ISOFIX fastening

After adjusting the shoulder belts (refer to 4.1) fasten the child seat with ISOFIX as follows:


1. Prepare ISOFIX




- ✎ Clip the two insertion guides* **1** to the two ISOFIX fastening points **28** of the vehicle seat (between seat and backrest). The cutout must point upwards.

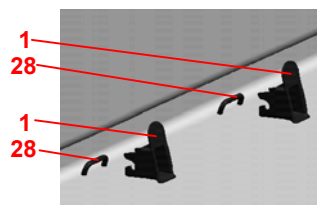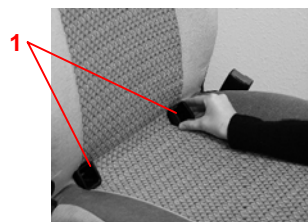

- ✎ Using the green handle **2**, pull the two connectors **3** as far as they will go.

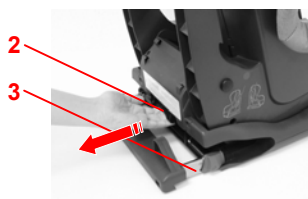

- ✎ On both sides of the seat squeeze the locking button **5** and the red release button **6** together and remove the connector protection **33**.


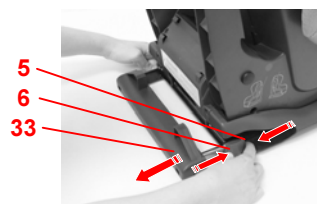


* The insertion guides make it easier to fit the child seat with ISOFIX and avoid damage to the seat cover. They should be removed when not in use and kept in a safe place. In vehicles with folding down backrests, the insertion guides must be removed before folding down the backrest.

Any malfunctions are usually caused by dirt on the insertion guides and on the hooks. This problem can be solved by cleaning these points.



- ✎ The hook* **4** must be open on both connectors **3**. To open the hook squeeze the locking button **5** and the red release button **6** together (refer to 2. Engage ISOFIX).

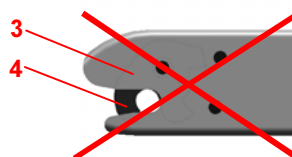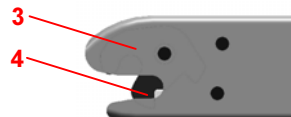



- ✎ Position the two connectors **3** directly in front of the two insertion guides **1**.




2. Engage ISOFIX



- ✎ Press the locking button **5** on one side to the back and engage the connector **3** ("click").

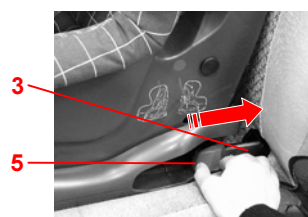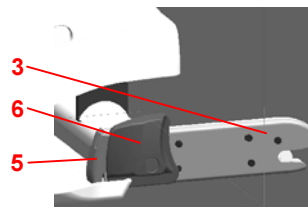

- ✎ Press the locking button **5** on the other side to the back and engage the connector **3** ("click").

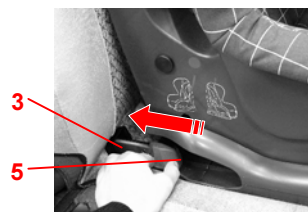



- ✎ To release the locking mechanism turn the green lever **34** downwards.
- ✎ Then push the child seat with the lever **34** turned down towards the backrest.



- ✎ Push the child seat towards the backrest applying firm, even pressure on both sides.



- ✎ Pull both sides to check that the seat is positioned firmly.



Checklist for correct installation



For the safety of your child, check that...

- the child seat is firmly installed in the vehicle.
- the seat shell with the connectors is engaged in the ISOFIX fastening **on both sides**.

Removal



- ✎ To release the ISOFIX fastening, squeeze the locking button **5** and the red release button **6** together, first on one side, then on the other. The connectors **3** are disengaged.

GB



3.2. with ISOFIX fastening and *TopTether* anchoring



The advantage of using the *TopTether*

The RÖMER DUO plus version with *TopTether* makes an additional stabilising connection possible between the child seat fastened with ISOFIX and the vehicle seat, thus reducing the injury risk even further.

The *TopTether* is placed in a fabric pocket on the top rear edge of your RÖMER DUO plus. If you have purchased a RÖMER DUO plus without *TopTether*, you can buy it as accessory from your specialised shop.

Important

The *TopTether* anchor must only be used in vehicles which have a vehicle-specific approval (see type approval list).

If your vehicle is equipped with one of the three *TopTether* metal anchorage points, they will be:

- on the rear shelf
- on the floor
- behind the backrest


Please observe the recommendations of your vehicle manual. Do not modify your vehicle by drilling or bolting something in. Never fasten the *TopTether* to a location which has not been recommended by the vehicle manufacturer. If the *TopTether* comes loose in a crash, there is a danger of injury to the vehicle passengers.

After adjusting the shoulder belts (refer to 4.1) fasten the child seat with ISOFIX and *TopTether* as follows:

1. Prepare ISOFIX




- ✂ Clip the two insertion guides* **1** to the two ISOFIX fastening points **28** of the vehicle seat (between seat and backrest). The cutout must point upwards.

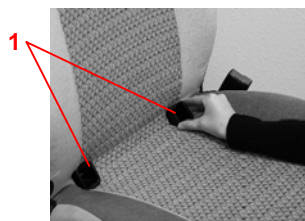


* The insertion guides make it easier to fit the child seat with ISOFIX and avoid damage to the seat cover. They should be removed when not in use and kept in a safe place. In vehicles with folding down backrests, the insertion guides must be removed before folding down the backrest.


Any malfunctions are usually caused by dirt on the insertion guides and on the hooks. This problem can be solved by cleaning these points.

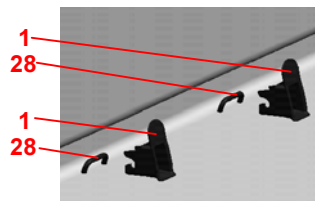



- ✎ Using the green handle **2**, pull the two connectors **3** as far as they will go.

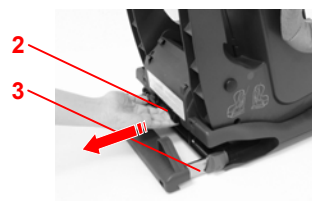


- ✎ On both sides of the seat squeeze the locking button **5** and the red release button **6** together and remove the connector protection **33**.

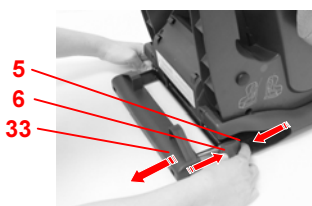

- ✎ The hook* **4** must be open on both connectors **3**. To open the hook squeeze the locking button **5** and the red release button **6** together (refer to engage ISOFIX.)

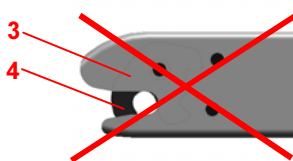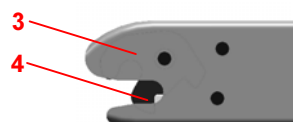


- ✎ Position the two connectors **3** directly in front of the two insertion guides **1**.

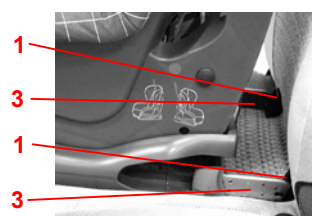

2. Prepare TopTether



- ✎ Take the TopTether out of the fabric pocket.
- ✎ Lift the metal tongue **27** away from the strap **26** and pull the strap out with the spring hook **31** to a V-shape.
- ✎ Place the strap behind the vehicle seat.


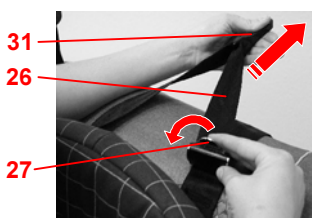





3. Engage ISOFIX




- ✎ Press the locking button **5** on one side to the back and engage the connector **3** ("click").

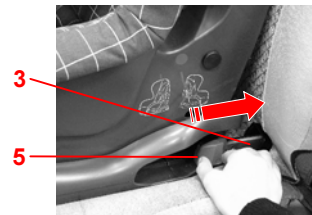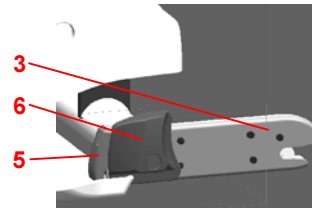

- ✎ Press the locking button **5** on the other side to the back and engage the connector **3** ("click").

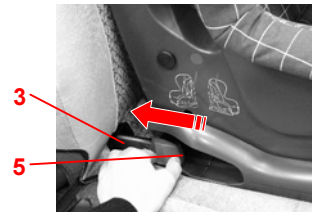

- ✎ To release the locking mechanism turn the green lever **34** downwards.
- ✎ Then push the child seat with the lever **34** turned down towards the backrest.

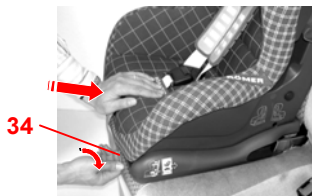

- ✎ Push the child seat towards the backrest applying firm, even pressure on both sides.




- ✎ Pull both sides to check that the seat is positioned firmly.



4. Anchor *TopTether*

- ✎ Open the spring hook **31** by pressing with your thumb against the spring clip.
- ✎ Attach the spring hook **31** to the appropriate anchorage point (on the rear shelf, on the floor or behind the backrest) - see vehicle manual.
- ✎ Pull on the *TopTether* belts **26** to remove all slack.

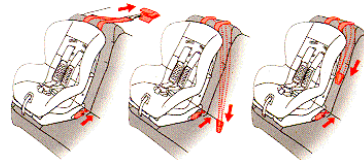

Checklist for correct installation



For the safety of your child, check that...

- the child seat is firmly installed in the vehicle.
- the seat shell with the connectors is engaged in the ISOFIX fastening **on both sides**.
- ✎ the *TopTether* is pulled tight over the backrest of the vehicle seat.



Removal



- ✎ To release the ISOFIX fastening, squeeze the locking button **5** and the red release button **6** together, first on one side, then on the other. The connectors **3** are disengaged.
- ✎ To release the *TopTether* anchoring loosen the belt **26** by lifting the metal tongue **27** of the adjuster away from the belt. Then take the spring hook **31** out of the anchoring point.




GB




3.3. without ISOFIX fastening (universal)

After adjusting the shoulder belts (refer to 4.1) place the child seat into the vehicle seat. Fasten the child seat with the vehicle 3-point-seat belt as follows:

- ✎ Place the child seat onto the cover side (locking mechanism will disengage).
- ✎ Push the ISOFIX connectors **3** at the green lever **2** completely into the seat base.

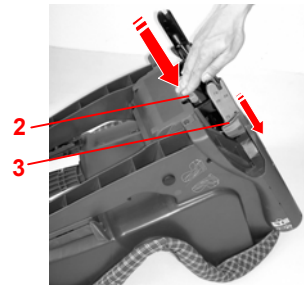

- ✎ Clip the connector protection **33** onto the connectors **3**.

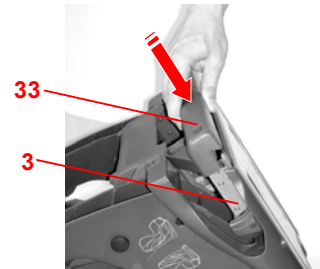

- ✎ Pull the belt out and guide it through the belt guides **7**.




- ✎ Engage buckle tongue in buckle housing.



* The connector protection 33 protects the ISOFIX connectors 3 when they are not used. Additionally it prevents the car seat from damage when the child seat is fixed with the 3-point belt.



- ✧ Then, on the side opposite the car seat belt buckle, swivel clamping lever **8** down and insert diagonal belt in belt lock-off **9**.
- ✧ Apply your body weight to the child seat (kneel into the seat).
At the same time pull the diagonal belt strongly to tighten (hold tension) and swivel the clamping lever **8** upwards until it engages.
- ✧ To re-tension pull the diagonal belt whilst the lock-off is closed.

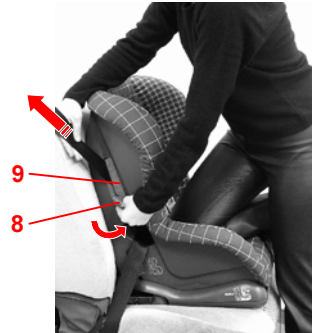

Checklist for correct installation



For the safety of your child, check that...


- the child seat is firmly installed in the vehicle.
- the belt is **not** twisted.
- the tongue and the buckle of the vehicle seat belt are **not** positioned in the belt guides of the child seat.
- the diagonal belt is **only** clamped by the lock-off which is located on the opposite side from the car seat belt buckle.



Removal



- ✧ To remove the child seat open the buckle of the vehicle seat belt and take the diagonal belt with a short pull out of the belt lock-off **9**.
- ✧ This countermovement releases the interior clamping of the belt lock-off **9** and the clamping lever **8** is now easy to open.

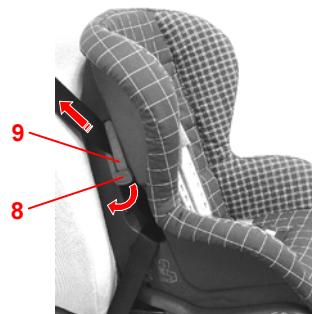




4. Securing your child

4.1. Adjusting the shoulder belts


Before you install the child seat in the vehicle, please ensure that the shoulder belts are adjusted to the correct height. Place child into the child seat.

- The shoulder belts **10** must run at **shoulder height** or a **little above the height of the child's shoulders**.
- The shoulder belts **10** must **not** run **behind the back** of the child or **at ear height** or above the ears.

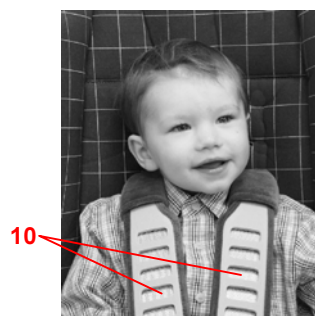


The shoulder belts are adjusted as follows:

- ✎ Loosen the harness straps as much as possible (refer to 4.2).
- ✎ Press the button of the shoulder belt height adjuster **14** at the rear of the seat shell and tilt the shoulder belt height adjuster **14** forward.
- ✎ By sliding the shoulder belt height adjuster **14** select the correct height of the shoulder belts and engage.

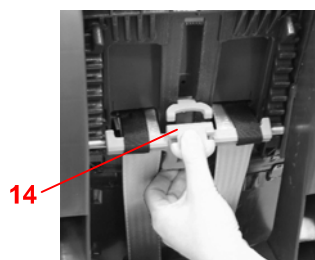


4.2. Loosening the harness

- ✎ Push with the finger of one hand on the adjuster **15** and with the other hand pull both shoulder belts **10** simultaneously towards you. (Do **not** pull the shoulder pads **11**.)

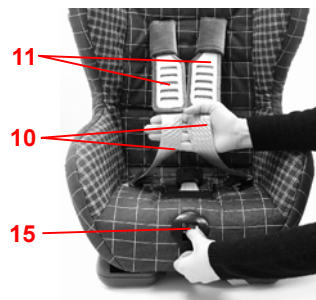


4.3. Tightening the harness

- ✎ Pull the belt end **16**. (Not to the top, not to the bottom, but **straight towards you**.)

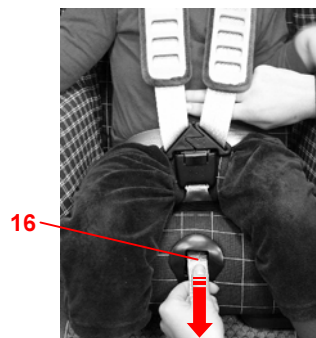



4.4. Buckling up the child

- ✎ Open the buckle **17** of the child seat by pressing the red release button **18**.
- ✎ Loosen the harness (refer to 4.2).

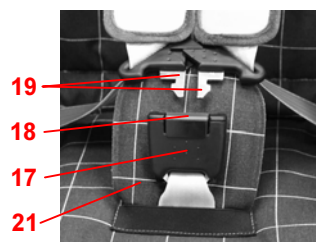




- ✎ Hook buckle tongues **19** into the rubber loops **29** (are not available on all covers) on the cover on the left and right side.
- ✎ Fold the crotch belt pad **21** and buckle **17** towards you.
- ✎ Place the child into child seat.
- ✎ Take the buckle tongues **19** left and right from the rubber loops **29** on the cover.
- ✎ Put the shoulder belts **10** over the shoulders of the child. (Do **not** twist the belts.)
- ✎ Put both buckle tongues **19** together ...

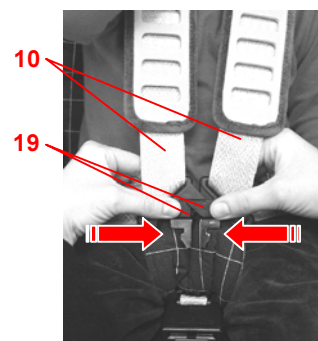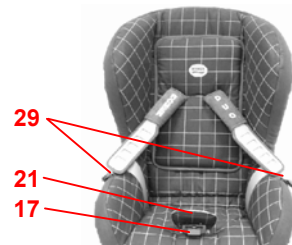

- ✎ ...and insert them into the buckle **17**. Listen for the audible "click".
- ✎ Tighten harness (refer to 4.3) until they lie close to the body of the child.

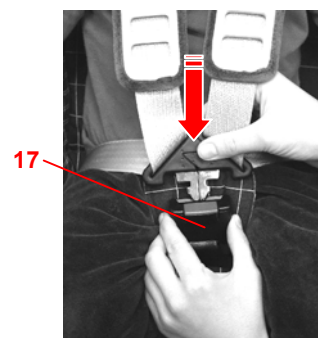

4.5. Function of the buckle

The function of the buckle is very important for the safety of your child. Functional faults relating to the buckle are mostly attributable to accumulations of dust and dirt.

Functional Problem

- The buckle tongues are **only slowly ejected** when pressing the red release button.
- The tongues will no longer lock home (are ejected again).
- The buckle tongues engage **without** the audible "click".




- The tongues are difficult to insert (you feel resistance).
- The buckle only opens after applying extreme force.

Remedy

1. Removing the crotch belt 20

- ✎ Open buckle 17 by pushing the red release button 18. Loosen the harness (refer to 4.2). Open Velcro on crotch belt pad 21 and take off. Put seat shell into "sleeping" position (refer to 6). Grasp the metal plate under the seat shell, with which the crotch belt 20 is secured to the seat shell. Push it upwards, on its side, through the belt slot 22.

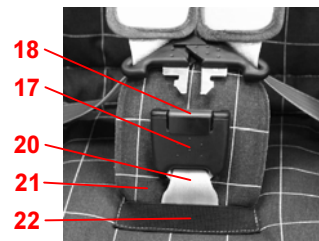

2. Cleaning the buckle 17

- ✎ Soak the buckle 17 in warm water (with dishwashing liquid) for an hour at least. Rinse and dry thoroughly.

3. Refitting the crotch belt 20

- ✎ Hold the metal plate sideways. Push it with the narrow side upwards through the belt slot 22 in the cover and into the seat shell. **Please check the correct fitting of the metal plate by pulling up on the crotch belt 20 several times.** Feed Velcro of the crotch belt pad 21 into the crotch belt 20 and close.

Functional Problem

- The buckle tongues can no longer be inserted into the buckle housing.

Remedy

- Unlock buckle 17 by pushing the red release button 18.

5. Checklist for correct securing of your child

For the safety of your child, check that...

- the belts of the child seat are close to the body, without restricting the child.
- the shoulder belts are adjusted correctly (refer to 4.1).
- the shoulder pads lie correctly on the child's body.
- the belts are **not** twisted.
- the buckle tongues lock in the buckle housing.

GB

6. Sitting / Resting / Sleeping - Adjustable seat shell

The seat shell has 3 positions for upright and reclined travel.

- ✎ From sitting to sleeping:
Push the adjusting handle **23** up and pull the seat shell forwards.
- ✎ From sleeping to sitting:
Push the adjusting handle **23** up and press the seat shell backwards.

The seat shell must firmly engage in each position. Double check by pulling on the seat shell.



7. General instructions

- The **protective effect** of this child safety seat is only assured provided it is used and installed **according to the directions for use**.
- If you have any difficulty using the child safety seat, please contact the manufacturer.
- The child safety seat has been designed, tested and approved to the requirements of the European Regulation for **Child Safety Equipment (ECE 44/03)**. The approval E (ringed) and approval number are found on the **approval label** attached to the child safety seat.
- **No modifications** may be made to the child safety seat **other than by the manufacturer**. If modifications are made, the official approval is no longer valid.

To retain the protective effect

- The child safety seat could suffer damage in an **accident** at a collision speed above 10 km/h. In such cases, the child safety seat must be inspected by the manufacturer or replaced, if necessary.
- Regularly check all important parts for damage. Ensure the correct operation of all mechanical components.
- Should the child safety seat be damaged (for instance after dropping it), it must be inspected by the manufacturer.
- Take care to ensure that the **child safety seat does not become trapped and therefore damaged** by a moveable vehicle seat or in the door of your vehicle (otherwise danger of breakage).



To protect all vehicle passengers

- With all personal safety systems, it is essential to ensure that **the backrest of the vehicle seat is adequately secured** and that **no heavy or sharp-edged objects are carried in the passenger compartment** (e.g. on the rear shelf) in order to reduce any risk of injury.
- All occupants of the vehicle must **also be secured**.
- Whenever you are driving, always be sure to **secure the child seat**, even when it is unoccupied.

To protect your child

- For maximum protection the following rule applies: **the closer the harness lies to the body of the child, the better the protection.**
- Use in the back seat: Slide the front seat forward far enough that the child's feet do **not** contact the backrest of the front seat (danger of injury).
- Please **do not leave your child alone and unsupervised** in the vehicle seat or in the vehicle itself.
- Ensure that your child only gets into and out of the vehicle on the side where the pavement is.
- To prevent your child from being exposed to unnecessary heat, **do not leave the child safety seat in bright sunshine** when it is not in use.
- Make plenty of breaks during a long journey so that your child has plenty of opportunity to move around and use up his/her energy.

To protect your vehicle

- Some vehicle seat covers of sensitive materials (e.g. velour, leather etc.) can show marks when using children's vehicle seats. These marks can be avoided by placing a blanket or towel on the vehicle seat.

8. Care instructions


Please note that you may only use original RÖMER replacement seat covers, because the seat cover fulfils an essential part of the system functions. Replacement seat covers are available from your stockist. The child seat **must not be used without the seat cover**.

- The **cover** can be removed and washed with a mild detergent in luke warm water (30 °C, gentle). Please also observe the washing instructions exactly. If washed at more than 30 °C, the colours of the cover material can fade. Do not spin or tumble dry (fabric may separate from padding)! The plastic insert can remain in the cover during the wash.
- The **plastic parts** can be cleaned with soapy water. **Do not** use harsh cleaning agents (like solvents).
- The **harness** can be removed and washed in luke warm soapy water. **Caution!** Never pull the belt tongues **19** off the shoulder belts.




8.1. Removing the cover

- ✎ Open the buckle **17** and loosen the harness straps as much as possible (refer to 4.2).

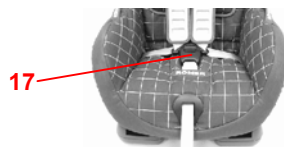


- ✎ Take the elastic seam of the cover from the hooks in the seat shell.

- ✎ Press the button of the shoulder belt height adjuster **14** at the rear of the seat shell and tilt the shoulder belt height adjuster **14** forward.

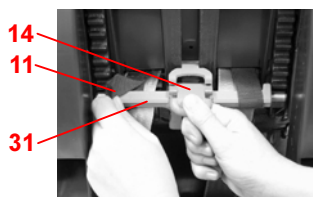


- ✎ Now slide the belt loops of the shoulder pads **11** from the extension **31** of the shoulder belt height adjuster **14**.

- ✎ Unhook the shoulder belts **10** at the rear of the seat shell from the yoke **13**. Ensure that the unhooked yoke **13** does not slip behind the shell into the base (for instance when putting the belt end **16**)

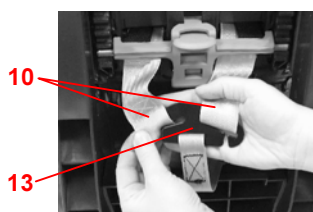

- ✎ Pull the shoulder belts **10** and belt loops of the shoulder pads **11** out of the pair of slots **12**.

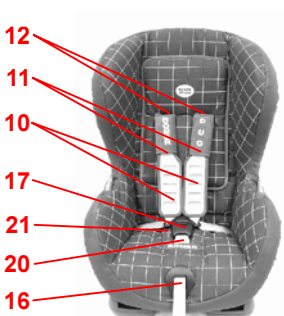

- ✎ Remove the shoulder pads **11** from the shoulder belts **10**.

- ✎ Take the belt end **16** and the crotch belt **20** (with buckle **17** and belt pad **21**) out of the cover.

- ✎ Pull the cover upward and detach it at the square hole from the head pad **35**.

- ✎ Take the shoulder belts **10** (with buckle tongues **19**) out of the cover.

- ✎ Take the cover of the head pad **35** off.




8.2. Refitting the cover


- ✎ Put on the cover of the head pad **35**.
- ✎ Put the cover over the head pad **35** starting at the lower side of the square hole.




- ✎ Feed the shoulder belts **10** (with buckle tongues **19**) through the cover.
- ✎ Attach the shoulder pads **11** to the shoulder belts **10**. (Do not exchange the shoulder pads.)
- ✎ Feed the crotch belt **20** (with buckle **17** and crotch belt pad **21**) and belt end **16** into cover.
- ✎ Clip the plastic insert of cover into the opening of the seat shell.

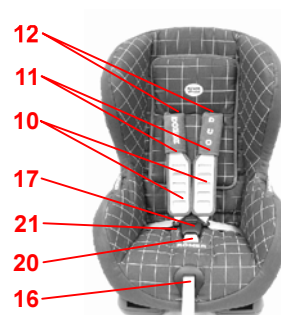


- ✎ Thread the shoulder belts **10** through the pair of slots **12**.
- ✎ Push the shoulder belts **10** at the rear of the seat between the deflection bar **32** and the extension **31** of the shoulder belt height adjuster **14**.

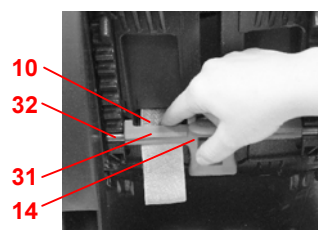

- ✎ Hook the shoulder belts **10** at the rear of the seat shell into the yoke **13**.
- ✎ Feed the belt loops of the shoulder pads **11** into the pair of slots **12**.

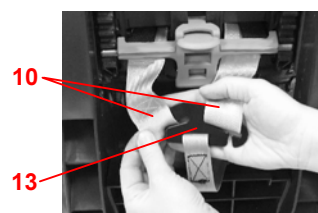

- ✎ Press the button of the shoulder belt height adjuster **14** at the rear of the seat and tilt the shoulder belt height adjuster **14** forward.
- ✎ Now slide the belt loops of the shoulder pads **11** onto the extension **31** of the shoulder belt height adjuster **14**.

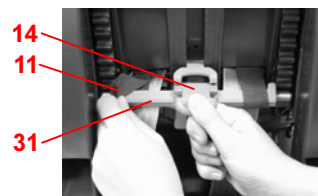





- ✂ Fold the fabric cover over the outer edges of the seat shell.
- ✂ Fasten the elastic seam of the fabric cover with the hooks on the seat shell.

8.3. Removing the belts (left and right)

- ✂ Open the buckle **17** and loosen the harness straps as much as possible (refer to 4.2).

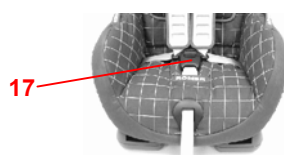


- ✂ Press the button of the shoulder belt height adjuster **14** at the rear of the seat shell and tilt the shoulder belt height adjuster **14** forward.

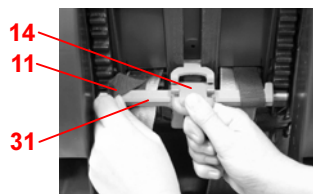


- ✂ Now slide the belt loops of the shoulder pads **11** from the extension **31** of the shoulder belt height adjuster **14**.

- ✂ Unhook the shoulder belts **10** at the rear of the seat shell from the yoke **13**. Ensure that the unhooked yoke **13** does not slip behind the shell into the base (for instance when putting the belt end **16**)

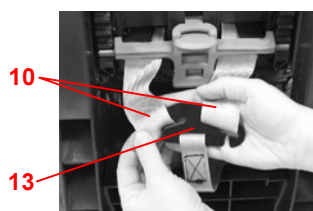


- ✂ Pull the shoulder belts **10** and belt loops of the shoulder pads **11** out of the pair of slots **12**.
- ✂ Remove the shoulder pads **11** from the shoulder belts **10**.

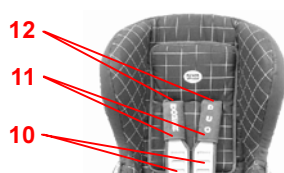


At the bottom


- ✎ Take the elastic seam of the cover (lower half) from the hooks in the seat shell.
- ✎ Grasp the metal part **30** with which the belt is secured to the seat shell, and pull out.

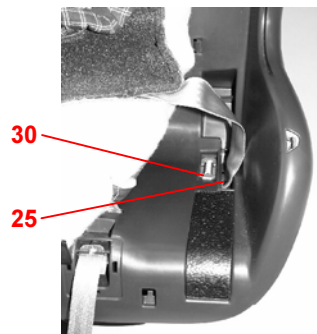

- ✎ Push the belt loop on the short side of the metal part **30** back and unhook.
- ✎ Slide the metal part **30** out of the belt loop.

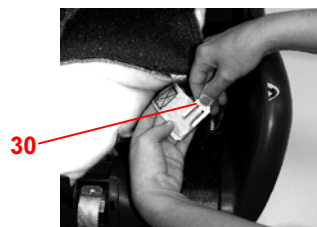


- ✎ Pull the belt out of side slot **25** of seat shell and out of the cover.

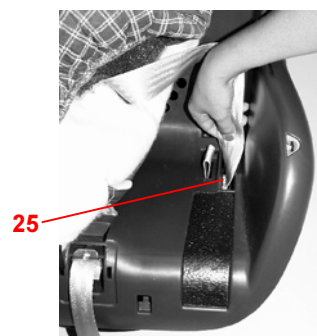




8.4. Refitting of the belts (left and right)


- ✎ First put the tongues **19** of the two harness straps together and engage in the buckle **17** (refer to 4.4).
- ✎ Feed the belt loop (black stitching) into the cover and into the outer side slot **25** of the seat shell.

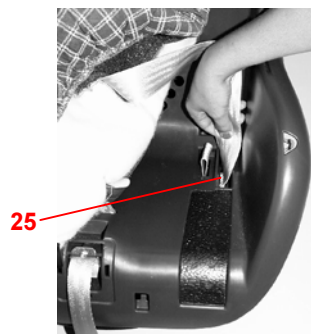


- ✎ Slide the metal part **30** into the belt loop (black stitching).
- ✎ Hook the belt loop into the long side of the metal part **30**.
- ✎ Push the belt loop back and hook into the short side of the metal part **30**.

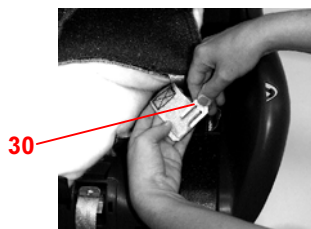

- ✎ Pull the belt until the metal part **30** lies **straight** against the seat shell.




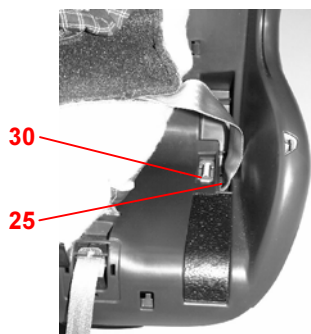


- ✎ Feed the belt end **16** into cover.
- ✎ Fold the fabric cover (lower half) over the outer edges of the seat shell.
- ✎ Clip the plastic insert of the cover into the opening of the seat shell.

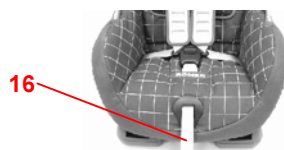

At the top

- ✎ Attach the shoulder pads **11** to the shoulder belts **10**. (Do **not** exchange the shoulder pads.)
- ✎ Thread the shoulder belts **10** through the pair of slots **12**.
- ✎ Push the shoulder belts **10** at the rear of the seat between the deflection bar **32** and the extension **31** of the shoulder belt height adjuster **14**.
- ✎ Hook the shoulder belts **10** at the rear of the seat shell into the yoke **13**.
- ✎ Feed the belt loops of the shoulder pads **11** into the pair of slots **12**.
- ✎ Press the button of the shoulder belt height adjuster **14** at the rear of the seat and tilt the shoulder belt height adjuster **14** forward.
- ✎ Now slide the belt loops of the shoulder pads **11** onto the extension **31** of the shoulder belt height adjuster **14**.

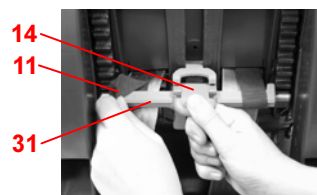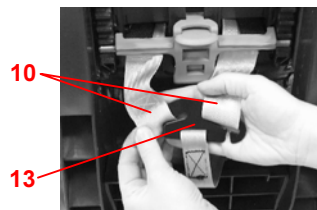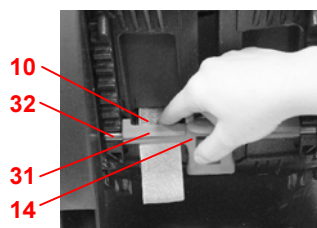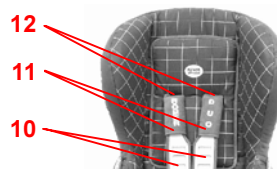



9. Tips regarding Disposal

Please observe the disposal regulations of your country.

dispose of packaging		container for paperboard
dispose of components	cover	garbage, thermal utilization
	plastic parts	according to the identification on the part into the containers provided
	metal parts	container for metals
	webbing	container for polyester
	buckle and tongue	garbage

10. Next child safety seat

Child safety seat	Test and certification to ECE R 44/03		
	Group	Body weight	Age range (approx.)
RÖMER VARIO	II	15 to 25 kg	3 to 7 years
RÖMER MONO	II+III	15 to 36 kg	3 to 12 years
RÖMER KOMBI	II+III	15 to 36 kg	3 to 12 years
RÖMER STAR RISER	II+III	15 to 36 kg	3 to 12 years
RÖMER ZOOM	II+III	15 to 36 kg	3 to 12 years
RÖMER COMFY	Backrest used in combination with RÖMER STAR RISER or RÖMER ZOOM		
RÖMER KID	II+III	15 to 36 kg	3 to 12 years



GUARANTEE

2 YEARS

For this car/bicycle child seat we issue a guarantee of 2 years on manufacturing or material faults. The guarantee period is effective from day of purchase. As proof please retain the filled out Guarantee Card, the Transfer-Check as well as your receipt for the whole term of the guarantee period.

In case of a complaint, the Guarantee Card must be returned with the product. The guarantee service is limited to car/bicycle child seats, which have been handled appropriately and which have been sent to us in clean condition.

Guarantee does not include:

- natural signs of wear and damage caused by excessive stress.
- damages caused by abuse, misuse or negligence.

What is covered by the Guarantee?

Fabric: All our fabrics meet very high requirements with regard to colour fastness when exposed to UV-radiation. However all fabrics fade when exposed to UV-radiation. This is not a material defect, but normal signs of wear which is not covered by the Guarantee.

Buckle: Buckle malfunction is often due to food and drink finding their way inside the buckle which can stop it from working properly. In the event of this happening, the buckle can be washed out. Please refer to your user instructions.

If the product is under guarantee please contact the retailer. He will advise and support you. When processing complaints, specific product depreciation rates will be applied. In this case we would refer you to our General Terms and Conditions which are available from your retailer.

Use, care and maintenance

The car/bicycle child seat must be used in accordance with the user instructions. We would like to point out that it is extremely important that only RÖMER accessories and replacement parts are used.



11. Guarantee Card / Transfer-Check

Name: _____
Address: _____
Post Code: _____
Place: _____
Telephone No (including area code): _____
e-mail address: _____

Car/bicycle child seat: _____
Article-No: _____
Design: _____
Accessories: _____

Transfer-Check:

1. Completeness ☐ examined / OK

2. Function test
- Seat adjustment mechanism ☐ examined / OK
- Belt adjustment ☐ examined / OK

3. Intactness
- Seat ☐ examined / OK
- Fabrics ☐ examined / OK
- Plastic parts ☐ examined / OK

- ☐ I have examined the car/bicycle child seat and ensured that the seat has been sold to the above customer in a complete and fully functional condition..
- ☐ I have obtained sufficient information on the above product and its functions before purchase and noted the manufacturer's user instructions supplied with the product..

Date of purchase: _____

Buyer (signature): _____

Retailer: _____
(Retailer's stamp)

