

User Instructions for OPEL Child Seat

Following versions are available:

OPEL Child Seat


with Impact-absorbing Cushion Weight Category I (9* up to 18 kg)

OPEL Child Seat

OPEL Child Seat Shell

Weight Category I (9" up to 18 kg)
Weight Category II (15 up to 25 kg)
Weight Category III (22 up to 36 kg)

Approved as epacified in ECE Regulation No. 44/03 (universal).
For installation facing direction of travel on the rear seat or on the front passenger seat.

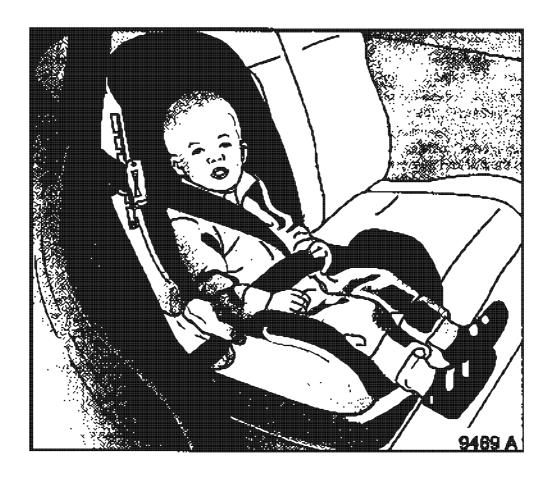

Only suitable for use in vehicles which are equipped with a 8-point seet beit with retractor which conforms to ECE Regulation No. 16 or enother comparable standard.

Important General Safety Advice

This child safety system is approved as specified in the European standard for child restraint systems ECE R 44/08. The certification mark and the registration number can be found on the change label.

Never use the child seat without the specified child seat cover or upholatery material. Do not replace these materials with others which have not been specified by the manufacturer. The cover or upholatery materials are important components for the safety function of the child seat.

Use of child emisty system with airbag system

Only use the outer rear seats for installation of the child safety system. In the event of an accident, the airbag can endanger a child if the child is seated in an unfevourable position. Vehicles with passenger's straight and without elde airbag: traiglistion of forward-facing child seats on the front passenger seat is permissible if the latter is pushed back as fer as possible. Child safety systems must not be installed in vehicles with aidealroag.

Daily use

The user's instructions must be strictly observed. It is not permitted to modify the child safety system in any way as this will impair the degree of safety offered.

Never leave your child unsupervised in the child safety system,

Give your child short breaks when driving on long journeys and ansure that your child never gets out of the vehicle on the driver's skip when unsupervised. Always make use of the child locks in passenger car doors, if fitted.

When Installing the seat

Please note that all belts for featening the child safety system must always be securely tensioned. The child restraint belts must be pulled tight and must not be (wished.

Slack beits considerably reduce the degree of safety offered and experience demonstrates that this subjects the child's body to considerably greater loads in the event of an accident.

Quide the lap belt so that it tight against the lower polyle in order to prevent internal injuries resulting from an accident. The belt clamp fitted to the child seat must be used for children weighing up to 22 kg to ensure that the child does not stacken the belt and thus permit the lap belt to elip towards the child's atomach. For the OPEL Child Seat with impact-absorbing cushion: ensure that the impact-absorbing cushion is pulled against the torse as tight as possible and that the belt cannot become stack.

Keep the accessory components for the child safety system in a safe place and ensure that individual parts are not lost during the installation procedure. Hard and plastic components of the child safety system must be located so they cannot be trapped between the vehicle doors or adjustable seets during daily use.

Securing Passengers and Luggage

Luggage or other objects which could cause injury in the event of an accident must be edequately secured. Do not place objects on the rear shelf - they can become dangerous projectiles in the event of an accident, if transporting the child safety system without a child passenger, please secure the child eafety system with the adult seat belt.

Always ensure that all passengers always wear a seat belt. Passengers not wearing a seat belt can present a considerable hazard to children secured in the child safety system.

Following an Accident

Your child eafety system must be replaced if it has been subjected to considerable stress as the result of an accident.

Converting the OPEL Child Seat

Fleat the conversion instructions and installation instructions.

The impact-absorbing cushion can be ordered from OPEL dealerships as an accessory to upgrade the OPEL child seat to the OPEL child seat with impact-absorbing cushion version (Category I).

Englorment

All materials are free from HCFCs.

part-no.: 90513347 / 90513434





Installation Instructions OPEL Child Seat with Impact-absorbing Cushlon

Vulides with passenger's airbag and without side mirbag installation of forward-facing child easis on the front passenger seat is permissible if the inter is pushed back as far as possible. Child safety systems must not be installed in vehicles with side-airbag.

Weight Category I (body weight 9* up to 18 kg)

4 the recommend that line cliffs nact with imposp-absorbing pushing in only mad your 11 by

The OPEL Child Seat (together with the child) is fastened using the vehicle on-board 3-point seat belt system only.

Securing the child

Stup 1: Searting the child (Due. 1 and 2)

Seat the child in the child seat. Take the impact-absorbing cushion and guide the partially withdrawn S-point seat best through the guide slot of the impact absorbing cushion. Audibly engage the buckle latch in the seat-best buckle.

Step 2: Festening the impact-absorbing quehion and the belt guide (liux. 3)

The lap beit section and the diagonal beit are routed above the beit guide lug. Then pull the diagonal beit firmly so that the impact-absorbing cushion is pulled tight against the child's torso. Then lay the securely tensioned diagonal beit likewise in the guide slot of the impact-absorbing cushion. Both beits must lie in the red lateral slots of the metal support and so exeruse the beit sections do not become slack.

This secures the child in position.





Installation Instructions OPEL Child Seat

Vehicles with presenger's alrhay and without aids airbag: installation of forward-facing child seals on the front passenger seat is permissible if the latter is pushed back as far as possible. Child safety systems must not be installed in vehicles with side-sirbag.

Weight Category II (body weight 15 up to 25 kg)

The OPEL Child Seat (together with the child) is fastened using the vehicle on-board 9-point seat belt system only.

Securing the child

\$tep 1: Seating the ahild

Seat the child in the child seat. Take the 3-point seat beit and sudibly engage the buckle latch in the seat-beit buckle.

Step 2: Quiding the belt (Illus 5 and 6)

Lay the kep bett section under the beit guide lugs indicated with a red arrow and key the diagonal beit above the bett guide lug.

Adjusting the upper belt guide to the shoulder height of the child (illus. 7)

The diagonal belt must be guided so that it is routed over the child's shoulder, so that the child carried silp out under the belt and the belt is not too close to the child's throat.

You can adjust the bett guide accordingly by pulling the detent knots behind the belt clamp and positioning the clamp at the correct height. To do this, open the cover and close it once the adjustment procedure is completed.

Stup & Locking the belt system (Illus. 8)

Open the red cover on the belt clamp. Then pull on the diagonal belt finnly so that the lap belt is pulled tight against the child's pelvis. Then lay the securely tensioned diagonal belt in the guide for the belt clamp and close the cover.







Conversion for OPEL Child Seat Shell

The OPEL child seat is initially facing forwards.

Florrowing the backruat

• Flemove teeth of the slotted screws on the side of the tower part of the beckreet with a screwdriver and remove the backreet (see illus. 1 and 2).

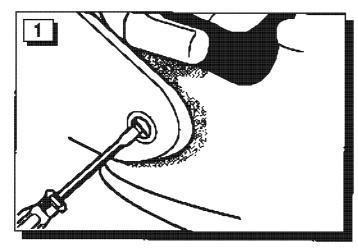

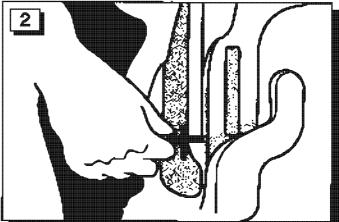





Installation Instructions OPEL Child Seat Shell

Vishician with passenger's airbug and without elde airbag; installation of forwardfacing child usuk on the front passenger sent is permissible if the latter is pushad back as far so possible. Child sefety systems must not be brakilled in vehicles with side-sirbug.

Weight Category III (body weight 22 up to 36 kg/150 cm)

The OPEL Child Seat (together with the child) is fastened using the vehicle on-board a-point seat belt eyelem only.

Securing the child

Step 1: Seating the child

Seat the child in the child seat. Take the 3-point seat beit and audibly engage the buckle in the seat-beit buckle.

Stop 2: Quiding the bolk (Illus 5 and 6)

Lay the kep bett section under the bett guide lugs indicated with a red arrow and key the diagonal beit above the best guide lug.

Pull the diagonal best firmly so that the lap best is pulled tight egainst the child's pelvis.

The diagonal belt must be guided so that it is routed over the child's shoulder

(illus. 9), so that the child cannot six out under the best and the best is not too close to the child's throat. Correct the routing if necessary by altering the height adjustment (if fitted) of the upper balt guide (illus, 10).

Ensure the child does not place the diagonal belt behind its back while you are driving.

part-no.: 90513347 / 90513434



Care Instructions

Beelo stein removet:

Only wipe from the outer edge of the stain towards the cantra of the stain in order to prevent it leaving permanent traces.

Stain ramoval table for epecial types of stains:

Type of stain	Procedure
Blood	Treat with cold saline solution (mixture: 2 tempoons of cooking salt to 1 litre of water), wash off and dab with a hand cloth, treat the rest with a mild uphoistery shampoo. Then rines with clean water.
Butter	Lift carefully from fabric with the blunt end of a knife. Then carefully debatf the remaining residue. Remove other residue with a non-water base solvent (e.g., benzane).
Vomit	Treat with cold water.
Fruit or berry whilms	Treat with cold mild detergent solution and rinse with clean water.
Chewing gurn	Hemove the chewing gum from the surface with a blunt knife. Sprey arry remaining stain with a freezing epray. The stain can then be removed by brushing or through abresion.
Ketchup	Lift with blunt end of knife. Dab off rasidue and then treat with an up-holatery shampoo if required.
Mud	Remove as much as possible with blunt end of knife. Allow residue to dry and then remove with vacuum cleaner. Treat with shamped if a stain remains.
Soft drinks	Dab the liquid off immediately with an absorbent cloth, tizzus or sponge.
Drinking chocolute or poffee	Wesh out with lukewarm mild detergent solution and rinse with clean water.
Urine, mucus, twoat	Dab off as well as possible and remove residue with upholetery shampoo, rinse out thoroughly.