

D	Änderungen bezüglich Konstruktion, Ausstattung, Farbe sowie Irrtum vorbehalten. Angaben und Abbildungen unverbindlich.	D	Einbauanleitung
GB	Subject to change in terms of construction, equipment and colour, and may contain errors. The information and illustrations are non-binding.	GB	Installation instructions
F	Sous réserve de modifications de la construction, de l'équipement, de la couleur et sous réserve d'erreurs. Les indications et les illustrations sont sans engagement.	F	Consignes de montage
NL	Wijzigingen met betrekking tot constructie, uitrusting en kleur evenals vergissingen voorbehouden. Gegevens en afbeeldingen niet bindend.	NL	Montagehandleiding
DK	Ændringer med hensyn til konstruktion, udstyr, farver samt fejl forbeholdes. Oplysninger og illustrationer er uforpligtende.	DK	Montagevejledning
N	Ændringer angående konstruksjon, utstyr, farge og feiltagelse forbeholdes. Opplysninger og illustrasjoner uforbindtlig.	N	Monteringsinstruksjon
S	Med reservation för ändringar vad det gäller konstruktion, utrustning, färg samt för misstag. Uppgifterna och bilderna är inte bindande.	S	Installationsanvisning
FIN	Pidätämme oikeuden rakennetta, varustusta, väriä koskeviin sekä erehdykseenä johtuviin muutoksiin. Tiedot ja kuvat eivät ole sitovia.	FIN	Asennusohje
I	Con riserva di modifiche relative a progettazione, dotazione, colore ed errori. Le indicazioni e figure sono fornite senza impegno.	I	Istruzioni per il montaggio
E	Reservadas las modificaciones respecto a diseño, equipamiento, color, así como error. Indicaciones y figuras sin compromiso.	E	Instrucciones de montaje
P	Reservamos o direito de alterações relativamente ao desenho, equipamento, cor, bem como de erro. Os dados e as gravuras não implicam compromisso da nossa parte.	P	Instruções de montagem
GR	Διατηνούμε κάθε επιφύλαξη ως προς αλλαγές σε σχέση με κατασκευή, εξοπλισμό, διαρρύθμιση, χρωματισμούς και λάθη παραδρομής.	GR	Οδηγίες εγκατάστασης
CZ	Změny, týkající se konstrukce, vybavení, barvy, jakož i omyly jsou vyhrazeny. Údaje a vyobrazení jsou nezávazné.	CZ	Návod k montáži
PL	Zastrzega się prawo do zmian dot. konstrukcji, wyposażenia, kolorystyki oraz pomylek. Dane i ilustracje niewiążące.	PL	Instrukcja montażu
TR	Tasarım, donanım ve renk bakımından değişiklik yapma hakkı ve hata ve eksiklik mahfuzdur. Veriler ve resimler bağlayıcı değildir.	TR	Montaj talimatı
H	A szerkesztel, a kivitel és a szín változtatása, valamint a változások joga fenntartva. Az adatok és az ábrák nem kötelező érvényűek.	H	Beépítési útmutató
HR	Pravo promjena u svezi konstrukcije, opreme, boje kao i zabuna ostavlja se. Podaci i ilustracije su neobavezne.	HR	Upute o ugradnji
BUL	Запазени права по отношение на конструкцията, оборудването, цвета и грешки. Данните и изображенията не са обвързващи.	BUL	Инструкция за монтаж
RO	Ne rezervăm dreptul unor modificări ale construcției, dotării, culorii și dreptul la erori. Datele indicate și imaginile sunt orientative.	RO	Instrucțiuni de montaj
RUS	Права на внесение изменений относительно конструкции, оснащения, окраски, а также на ошибки сохраняются. Данные и иллюстрации имеют примерный характер.	RUS	Инструкция по монтажу и установке
LT	Pasilekama konstrukcijos, rangos bei reikmenų spalvos pakeltimų ir klaidų teisė. Duomenys ir iliustracijos nepareigojantys.	LT	Montavimo informacija
LV	Tiek paturēšas tiesības uz konstrukcijas, iekārtu, krāsu izmaiņām, kā arī kļūdītānos. Dati un attēli bez saistībām.	LV	Iemontēšanas pamācība
EST	Konstruktsioonil, varustuse ja vööri osas muudatused ning eakimine lubatud. Andmed ja joonised on mitteisiduvad.	EST	Paigaldusjuhend
SLO	Zadržana pravica do sprememb glede konstrukcije, opreme, barve ter pomote. Podatki in slike so neobvezne.	SLO	Navodilo za vgradnjo
SK	Zmeny, ktoré sa týkajú konštrukcie, vybavenia, farby, ako aj omyly sú vyhradené. Údaje a zobrazenia sú nezáväzná.	SK	Montážny návod

Water Heater Unit



Thermo Top E Additional Heater



Thermo Top C Additional Heater



Thermo Top P Additional Heater



Installation Instructions

Opel Antara

2.4 Gasoline and 2.0 Diesel
from Model Year 2007
Left-hand drive vehicle
Manual transmission



WARNING!

Hazard warning:

Incorrect installation or repair of Webasto heating systems may cause a fire or result in the emission of carbon monoxide, which can be fatal. Serious or fatal injuries can be caused as a result.

Specialist company training, technical documentation, specialized tools and equipment are required to install and repair Webasto heating and cooling systems.

NEVER attempt to install or repair Webasto heating or cooling systems if you have not successfully completed the company training and thereby acquired the required technical skills, or if you do not have access to the required technical documentation, tools and equipment needed to carry out correct installation and repairs.

ALWAYS follow all Webasto installation and repair instructions and observe all warnings.

Webasto does not accept any liability for defects and damage that are attributable to installation by untrained staff.

Table of Contents

Validity	2	Preparing heater unit	14
Heater Unit/Installation Kit	3	Preparing installation location	16
Foreword	3	Installing heater unit	17
General Instructions	3	Repositioning control unit for gasoline engine only	18
Special Tools	3	Coolant connection for diesel engine	19
Explanatory Notes on Document	4	Coolant connection for gasoline	22
Preliminary Work	5	Fuel Connection	24
Heater unit installation location	5	Combustion air	28
Electrical Connections	6	Exhaust system	29
Fan controller for manual air conditioning	7	Final Work	31
Automatic air-conditioning fan controller	9	Operating Instructions for End Customer	32
Remote option (Telestart)	12		
Remote option (Thermo Call)	13		

Validity

Manufacturer	Model	Type	EG-BE No./ABE
Opel	Antara	L-A	e4 * 2001 / 116 * 0118

Engine type	Engine model	Output in kW	Displacement in cm ³
Z20S	Diesel	110	1991
Z24SED	Gasoline	103	2405

Vehicle and engine types, equipment variants and national specifications not listed in these installation instructions have not been tested. However, installation according to these installation instructions may be possible.

The installation location of a digital timer and summer/winter switch should be confirmed with the end customer before installation.

Heater Unit/Installation Kit

Quantity	Description	Order No.:
1	Opel-specific heater unit delivery scope	See Opel price list
1	Installation kit for Opel Antara Gasoline and Diesel (basic kit)	1311919A

Optional heater control:

Quantity	Description	Order No.:
1	Heater control	See Opel price list

Also required for 2.4 Gasoline:

Quantity	Description	Order No.:
1	Additional kit for Opel Antara 2.4 Gasoline	1311920A

Also required with automatic air-conditioning:

Quantity	Description	Order No.:
1	Kit for Opel Antara with Automatic Air-Conditioning	1311923A

Heater unit recommended for the respective vehicle class:

Vehicle	Heater unit
Compact car	Thermo Top E
Mid-size car, station wagon	Thermo Top C
Full-size car, van, offroader	Thermo Top P

The selection of the heater unit is based on the passenger compartment size of the vehicle and the level of comfort required by the customer!

**Foreword**

These installation instructions apply to Opel Antara vehicles with a 2.4 Gasoline and 2.0 Diesel engine and a manual transmission - for validity, see page 2 - from model year 2007 and later, assuming technical modifications to the vehicle do not affect installation, any liability claims excluded. Depending on the vehicle version and equipment, modifications may be necessary during installation with respect to these installation instructions.

However, the stipulations in the "installation instructions" and "operating and maintenance instructions" for the *Thermo Top C/P/E* must always be observed.

The corresponding rules of technology and any information from the vehicle manufacturer should be observed during the installation work.

General Instructions

Installation should be carried out according to the general, standard rules of technology. Unless specified otherwise, fasten hoses, lines and wiring harnesses to original vehicle lines and wiring harnesses using cable ties.

Sharp edges should be fitted with edge protectors (split-open plastic hose).







Spray unfinished body areas, e.g. drilled holes, with anti-corrosion wax (Tectyl 100K, Order No. 111329).

Special Tools

- Torque wrench for 2.0 - 10 Nm
- Hose clamping pliers
- Metric Thread-Setter Kit

Explanatory Notes on Document

To provide you with a quick overview of the individual working steps, you will find an identification mark on the outside top right corner of the page in question.

Mechanical system**Electrical system****Coolant connection****Fuel connection****Exhaust system****Combustion air**

Special features are highlighted using the following symbols:



Specific risk of injury or fatal accidents.



Specific risk of damage to components.





Specific risk of fire or explosion.



Reference to general installation instructions of Webasto components or to the manufacturer's vehicle-specific documents.



Reference to a special technical feature.




The arrow in the vehicle icon indicates the position on the vehicle and the viewing angle.

Preliminary Work

WARNING!

- Disconnect the battery "earth" or "ground" connection.
- Depressurize the cooling system.
- Copy the factory number from the original type label to the duplicate type label.
- Remove years that do not apply from the duplicate label.
- Attach the duplicate label (type label) in the appropriate place.
- Completely remove the battery
- Remove the fuse and relay box
- Remove the engine cover
- Remove the engine control unit
- Disconnect the power-steering fluid reservoir
- Disconnect the expansion tank
- Remove the charge-air tube between the air filter and the turbocharger
- Disconnect the air hose from the charge-air tube to the engine at the engine
- Remove the filler neck of the window washer system
- Remove the vent line at the top to the coolant expansion tank
- Open the fuel tank cap, ventilate the tank.
- Close the tank cap again.
- Remove the underride protection
- Open the left tank mounting service lid
- Remove the A/C control panel according to the manufacturer's instructions (only with manual air-conditioning)
- Remove the glove compartment (only with automatic air-conditioning)

Remove page 32 "Operating Instructions for End Customer" and add to the vehicle operating instructions.

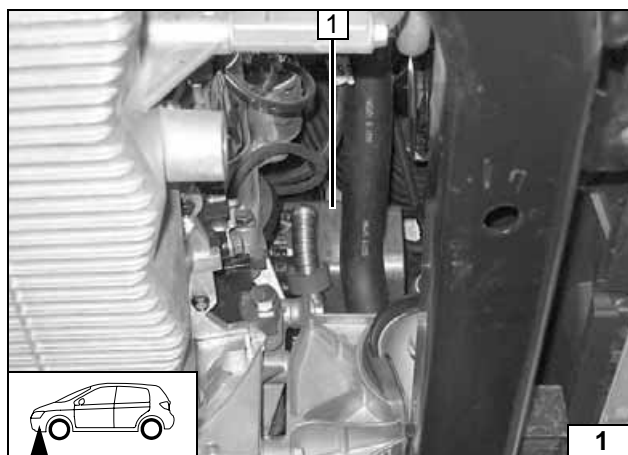

Heater unit installation location

1 Heater unit

Installation
location




Electrical Connections





Wiring harness pass through

- 1 Protective rubber plug

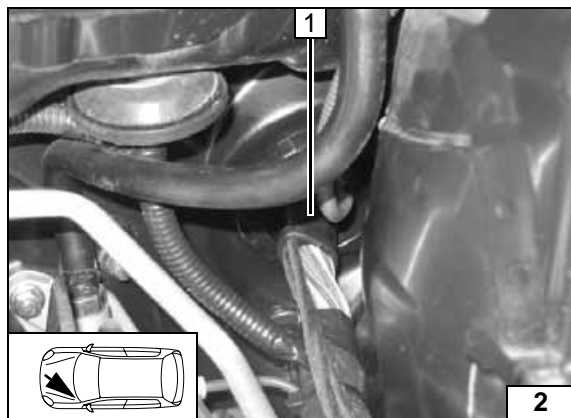


Digital timer

- 1 Digital timer

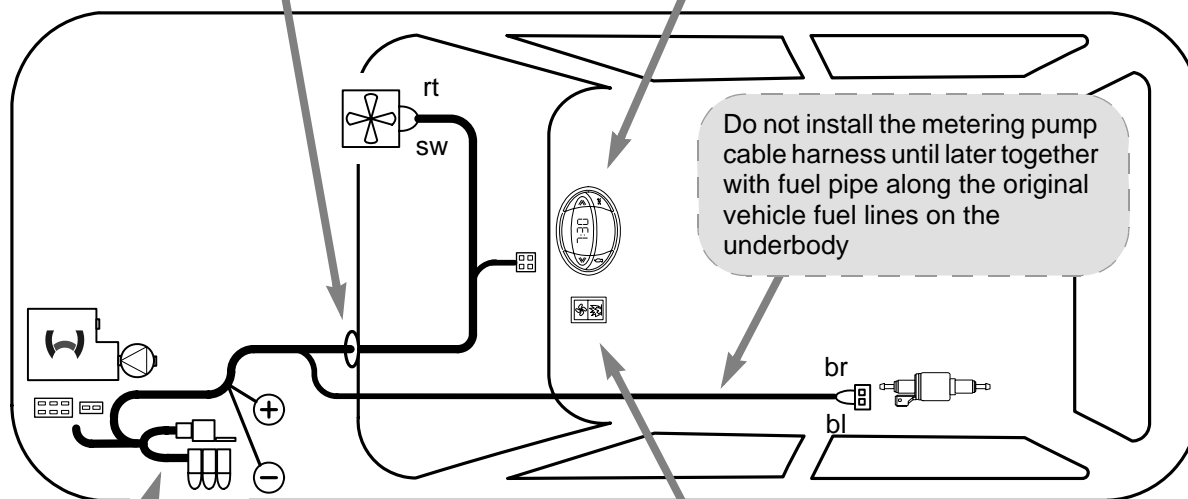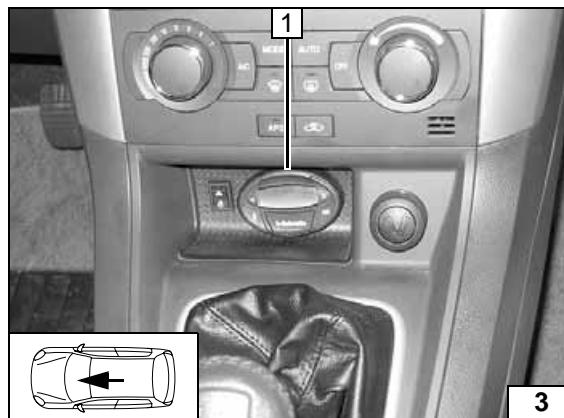


Wiring
harness
installation
diagram

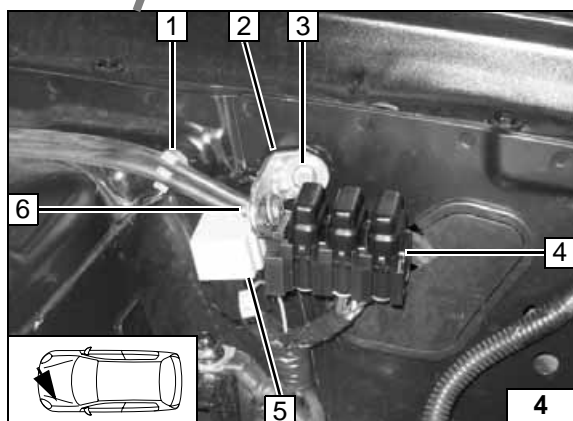

Fuse holder, relay K3

- 1 Move original vehicle clip
- 2 Angle bracket
- 3 Drill out hole to 9 mm dia., mount M6 rivet nut, M6x20 bolt, spring lockwasher
- 4 Fuse holder
- 5 K3 relay
- 6 Align M5x16 bolt, large diameter washer, M5 flanged nut to right in oblong hole

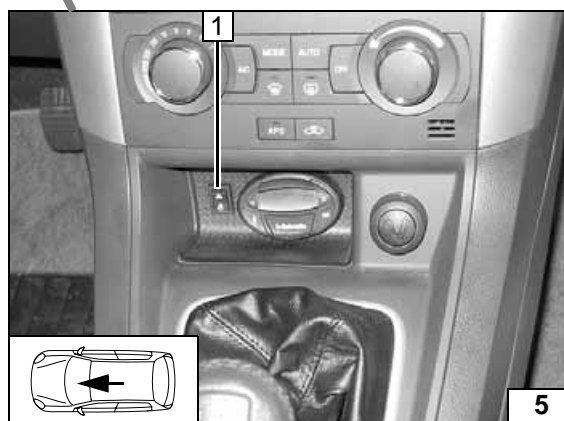


Summer/winter switch option

- 1 Summer/winter switch, drilled hole 12 mm dia.




Fan controller for manual air conditioning

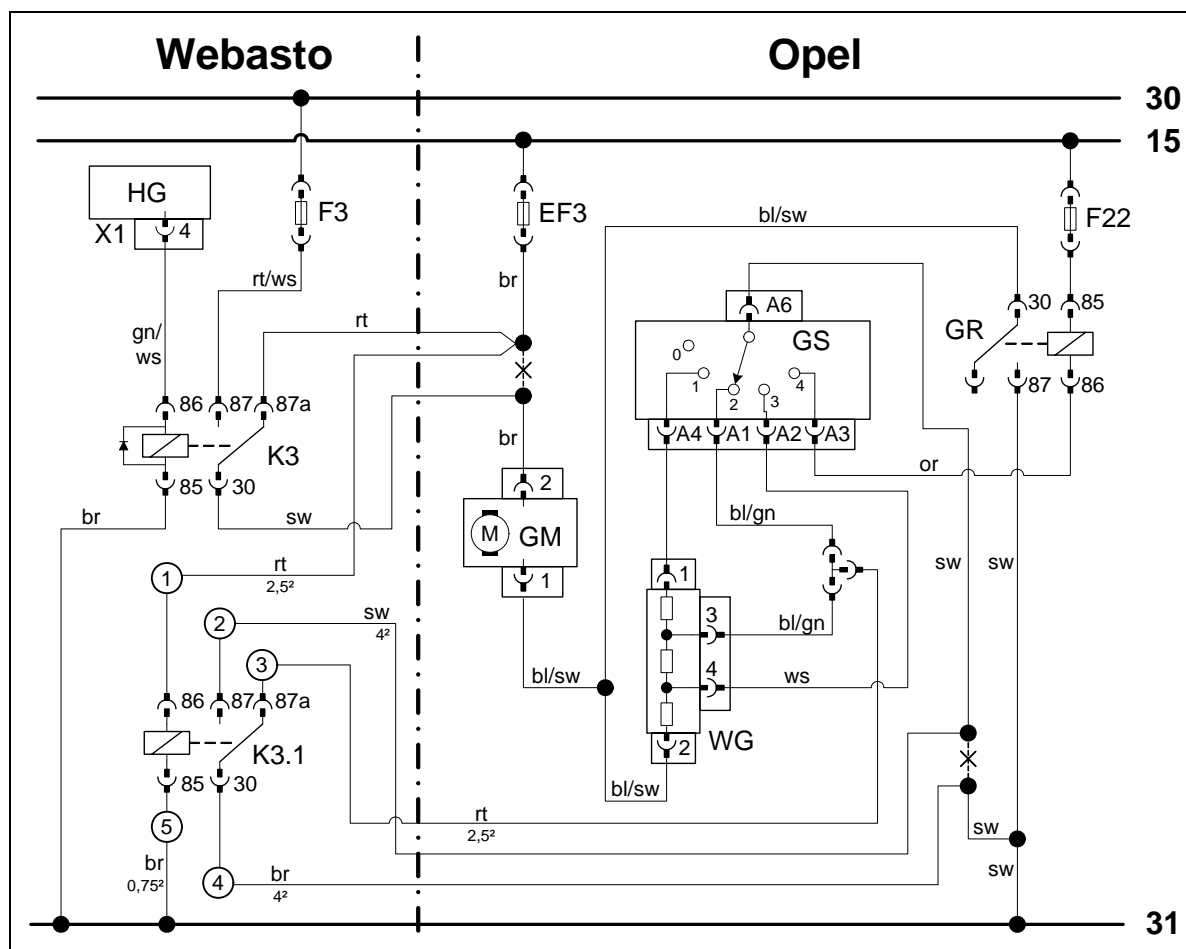

Wiring diagram for manual air conditioning

Webasto components		Components of Opel Antara		Colors and symbols	
HG	Heater unit TT-C/E	GM	Fan motor	rt	red
X1	6-pin connector	GS	Fan switch	ws	white
F3	Fuse, 25 A	EF3	40 A fan fuse	sw	black
K3	Fan relay	WG	Resistor group	br	brown
K3.1	Additional relay	GR	Fan relay	gn	green
				bl	blue
				or	orange
				X	Cutting point
				Wiring colors may vary.	

Legend

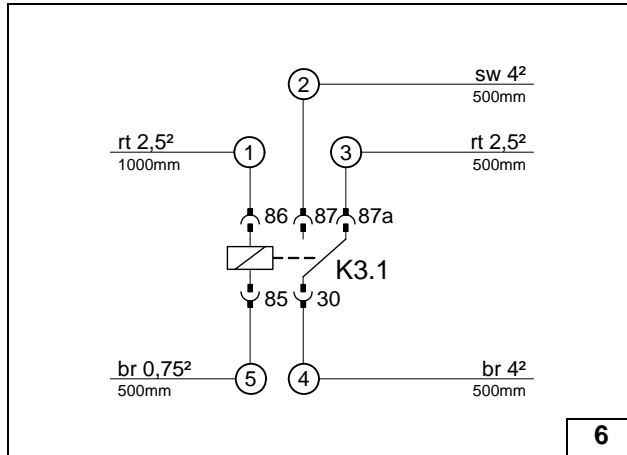


Preparing electrical system

Produce connections as shown in wiring diagram.

Cut 500 mm off included protective sleeving and push onto lines ②, ③ and ④. Push remaining end of protective sleeving onto line ①.



Preparing additional relay K3.1

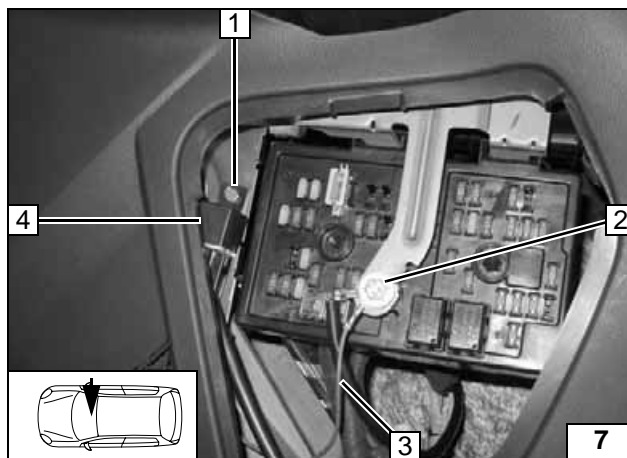


Fan controller

Produce connections as shown in wiring diagram.

- 1 Mount M5x16 bolt, flanged nut in existing hole
- 2 Original vehicle ground support point
- 3 Brown (br) wire ⑤ 0,75² from K3.1/85
- 4 Additional relay K3.1



Connecting additional relay

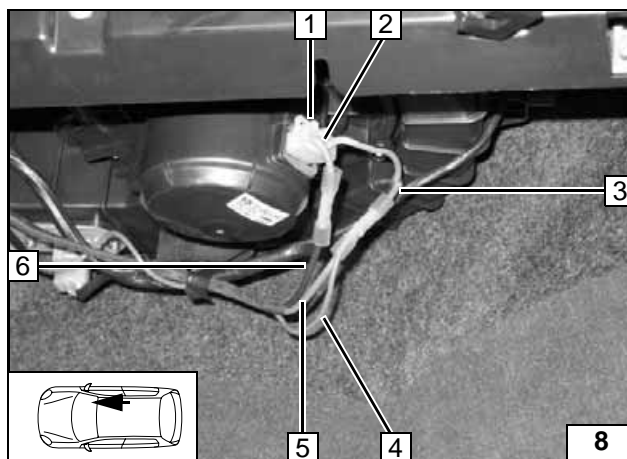


Connection to 2-pin connector 1 from fan motor.

Produce connections as shown in wiring diagram (crimp and shrink).

- 2 Brown (br) wire to connector
- 3 Brown (br) wire from fuse EF3
- 4 Red (rt) wire ① 2.5² from K3.1/86
- 5 Red (rt) wire to K3/87a
- 6 Black (sw) wire from K3/30



Connecting fan motor

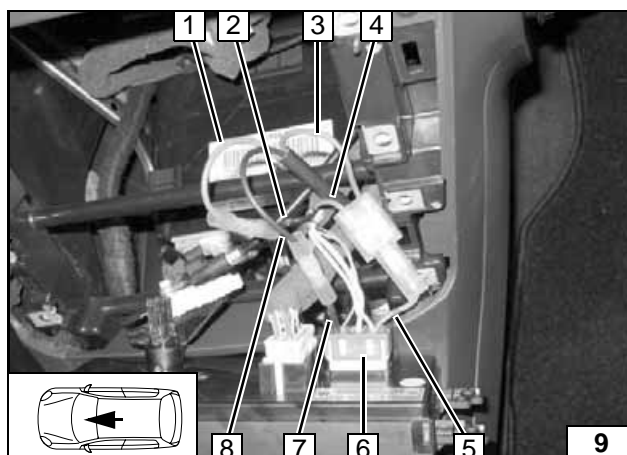

Connection to 6-pin connector 6 from fan switch.

Produce connections as shown in wiring diagram (crimp and shrink).


- 1 Brown (br) wire ④ 4² from K3.1/30
- 2 Black (sw) wire to original vehicle ground point
- 3 Red (rt) wire ③, 2.5² from K3.1/87a
- 4 Blue/green (bl/gn) wire to resistor group
- 5 Blue/green (bl/gn) wire from connector A1
- 7 Black (sw) wire from connector A6
- 8 Black (sw) wire ②, 4² from K3.1/87



Connection to fan switch




Automatic air-conditioning fan controller

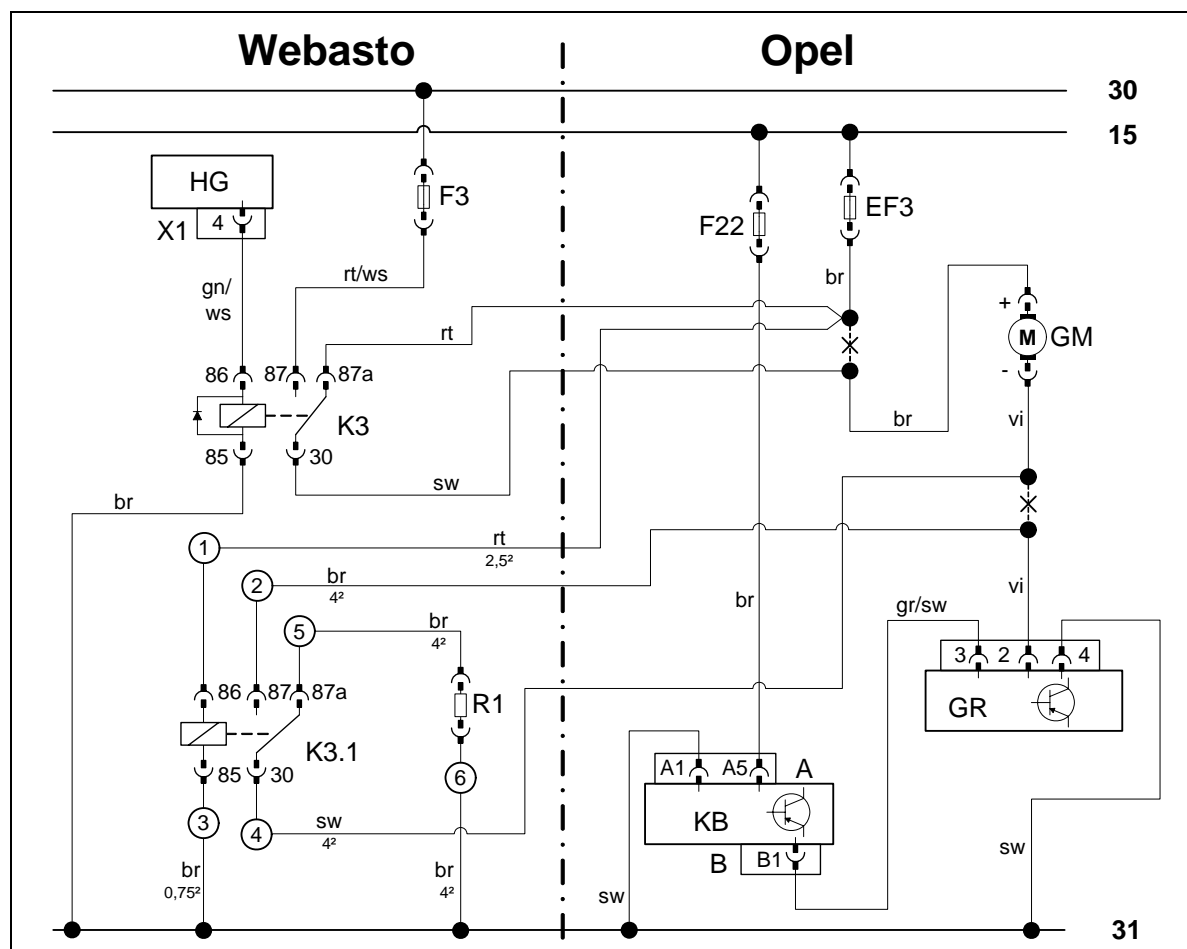

Automatic air-conditioning circuit diagram

Webasto components		Components of Opel Antara		Colors and symbols	
HG	Heater unit TT-C/E	GM	Fan motor	rt	red
X1	6-pin heater unit connector	GR	Fan controller	ws	white
F3	Fuse, 25 A	KB	Air-conditioning control element	sw	black
K3	Fan relay	F22	Fuse 10A	br	brown
K3.1	Additional relay	EF3	Fuse 40A	gn	green
R1	0.9 ohm resistor	A	Connector for A/C control panel	bl	blue
		B	Connector for A/C control panel	GR	gray
				vi	violet
				X	Cutting point
				Wiring colors may vary.	

Legend

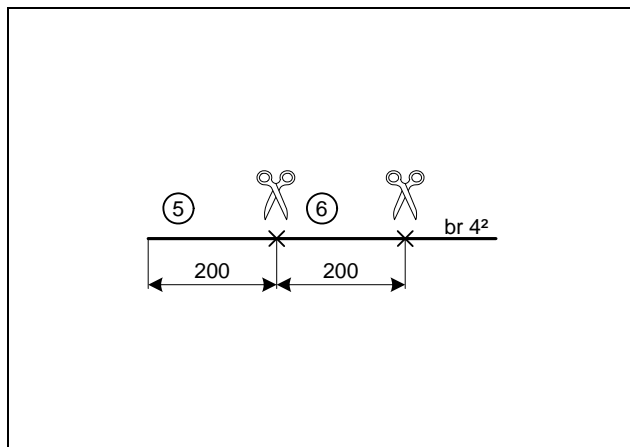


Preparing electrical system

Produce connections as shown in wiring diagram.

Crimp cable lug onto brown (br) wire ③ 0.75² provided and onto brown (br) wire section ⑥ 4².



Cutting brown (br) wire to length

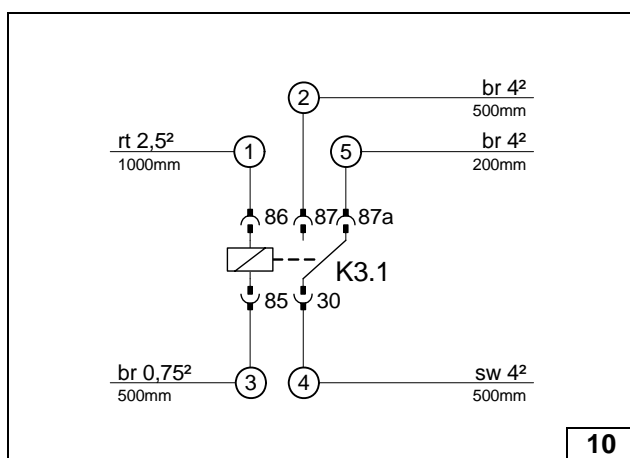


Produce connections as shown in wiring diagram.

Pull wires ①, ② and ④ in protective sleeving provided.



Preparing additional relay K3.1

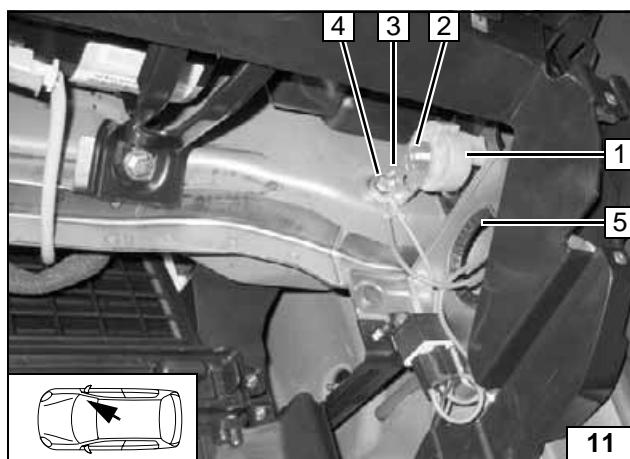

Fan controller


Resistor 1 becomes hot!

Ensure sufficient spacing (at least 20 mm) to neighboring components.

- 3 M5x30 cap screw, large diameter washer, nut [2x]
- 2 Angle bracket
- 1 M6x20 bolt, spring lockwasher, brown (br) ground wires ③ 0.75² and ⑥ br 4² on existing threaded hole
- 5 Mount edge protection



Installing resistor and additional relay

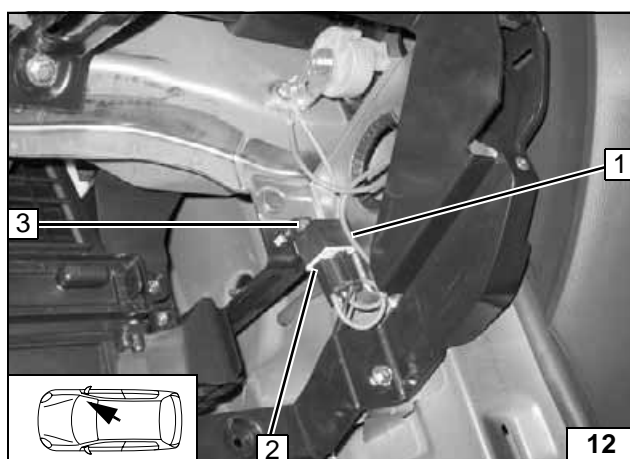


Produce connections as shown in wiring diagram.

- 1 Brown (br) wire ⑤ 4² from K3/87a to resistor
- 2 Additional relay K3.1
- 3 M5x16 bolt, flanged nut on existing hole



Connecting resistor and additional relay

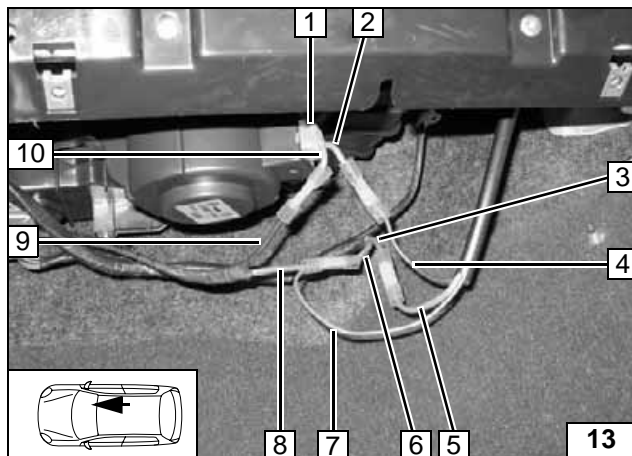


Connection to 2-pin connector 1 from fan motor.

Produce connections as shown in wiring diagram (crimp and shrink).

- 2 Violet (vi) wire from connector
- 3 Violet (vi) wire to fan controller
- 4 Black (sw) wire ④, 4² from K3.1/30
- 5 Brown (br) wire ② 4² from K3.1/87
- 6 Brown (br) wire from fuse EF3
- 7 Red (rt) wire ① 2.5² from K3.1/86
- 8 Red (rt) wire to K3/87a
- 9 Black (sw) wire from K3/30
- 10 Brown (br) wire to connector




**Connec-
ting fan
motor**

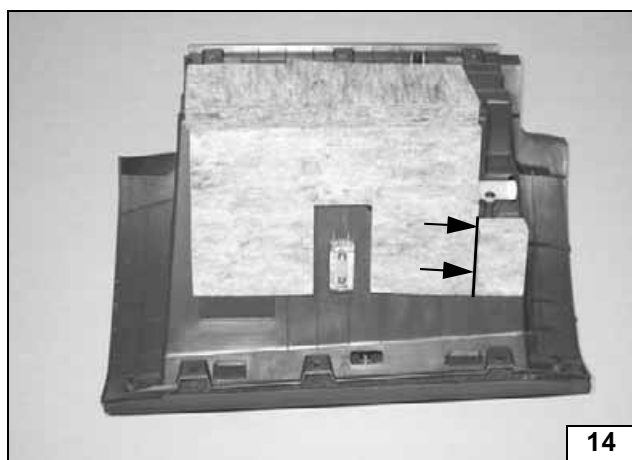

Cut away **insulation** of glove compartment at marking.



**Cutting
away
insulation**

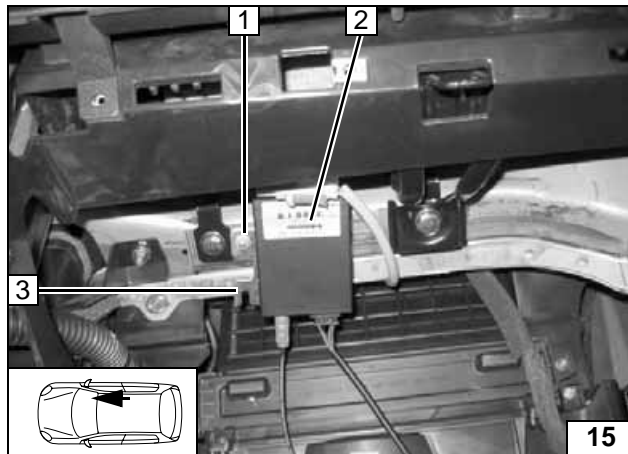


Remote option (Telestart)

- 1 Existing hole, M5x16 bolt, washer, flanged nut
- 2 Receiver
- 3 Telestart bracket




Installing receiver

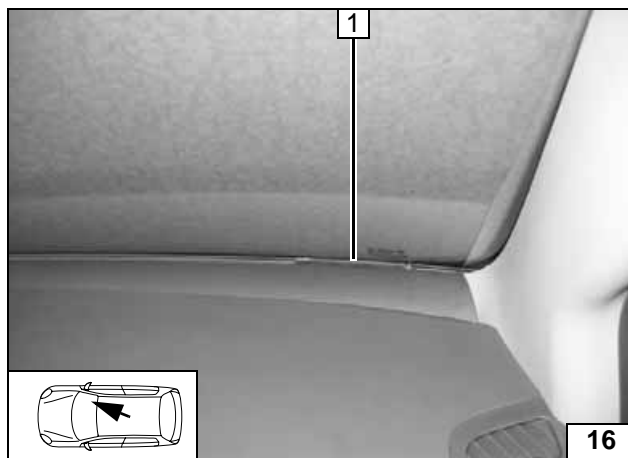

- 1 Antenna

Installing antenna

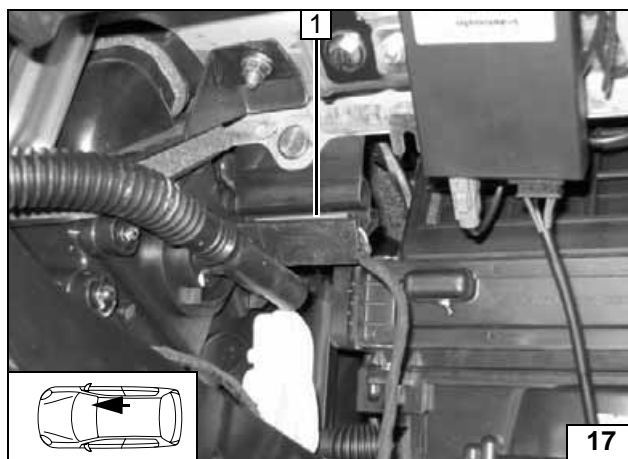

Temperature sensor for HTM100 only

- 1 Fasten temperature sensor with suitable means (here double-sided adhesive tape)

Installing temperature sensor




Remote option (Thermo Call)

1 Fasten receiver with suitable means (here double-sided adhesive tape)




Installing receiver

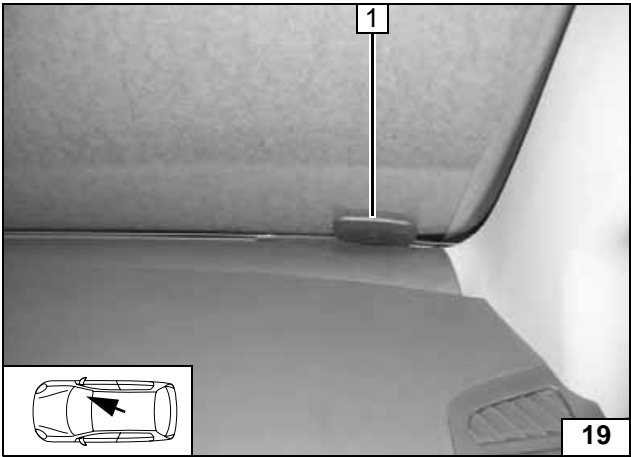


1 Antenna

Installing antenna

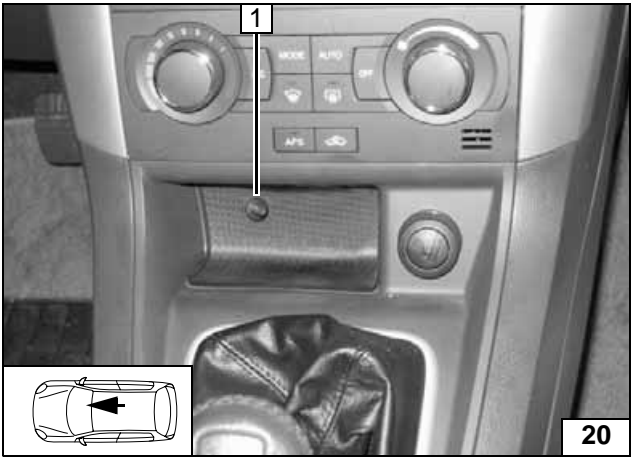

1 Pushbutton

Installing push button

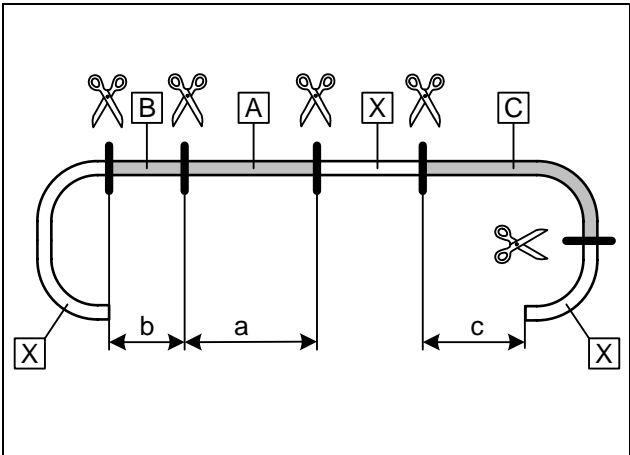

Preparing heater unit


Diesel engine only

a = 440 mm
b = 125 mm
c = 520 mm

Discard section X



Cutting coolant hoses to length

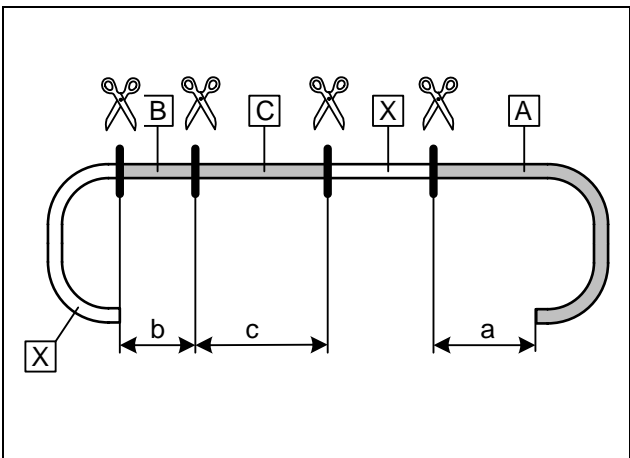


Gasoline engine only

a = 170 mm
b = 125 mm
c = 395 mm

Discard section X




Cutting coolant hoses to length

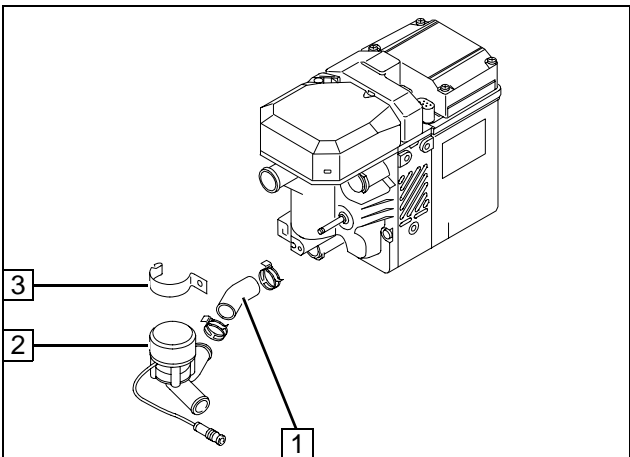

Remove water pump 2 from heater unit. Hose section 1 and spring clip will be reused. Discard retaining clip 3 and bolt.




Removing water pump

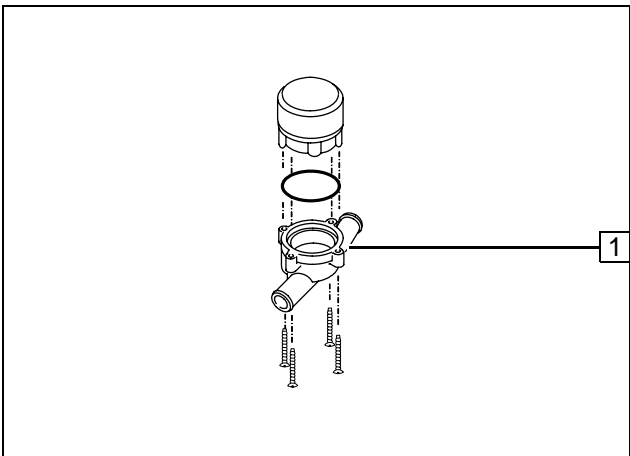

Replace 193° lid 1.




Replacing pump lid

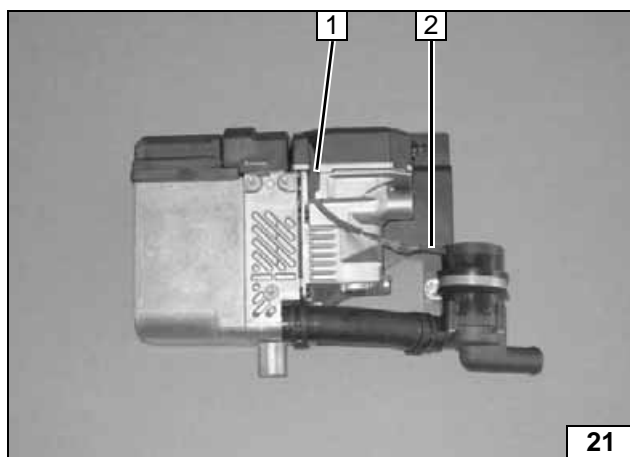

Connect adapter line of water pump 1, cut to length and connect identical colors to wiring harness of water pump 2 using connectors (crimp and shrink).




Connecting circulating pump

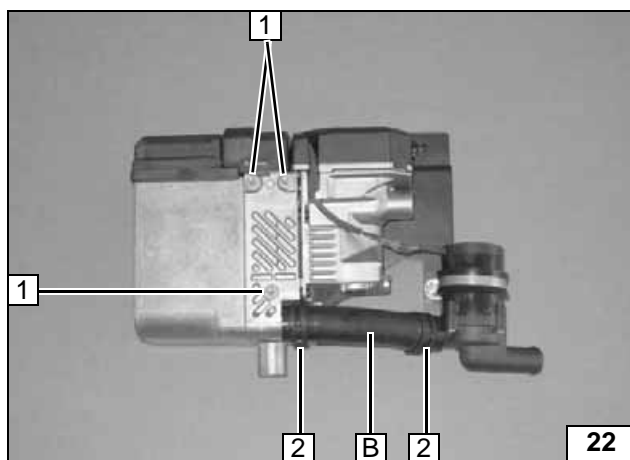

Ejot stud, tightening torque 10 Nm!

- 1 Ejot stud [3x]
- 2 Existing spring clip [2x]

Preassembling heater unit

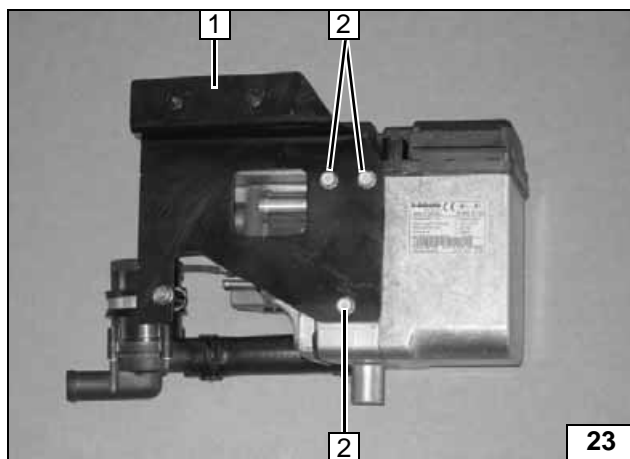


Ejot screw 2 [3x], tightening torque 10 Nm!

- 1 Bracket part 1





Preassembling bracket 1 on heater unit

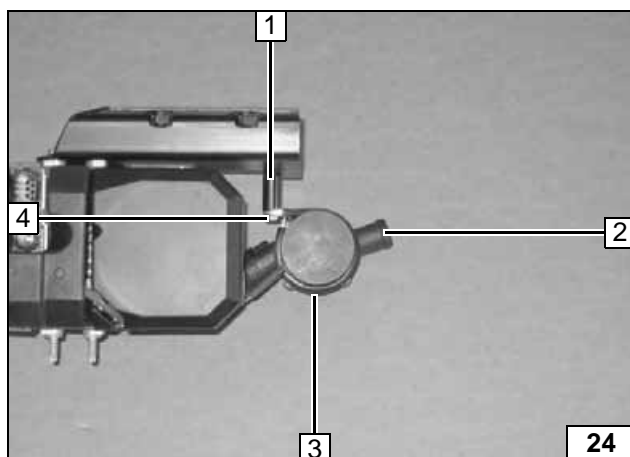

- 1 20 mm spacer
- 2 Water pump
- 3 Rubber-coated pipe clamp, 48 mm dia.
- 4 M6x35 bolt, M6 flanged nut


Preassembling water pump

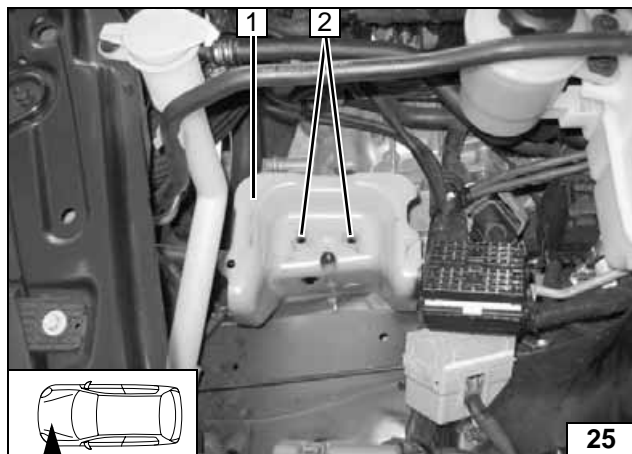

Preparing installation location

- 1 Cross member for battery carrier
- 2 Drill out thread to 10 mm dia. [2x]


Drilling out
thread

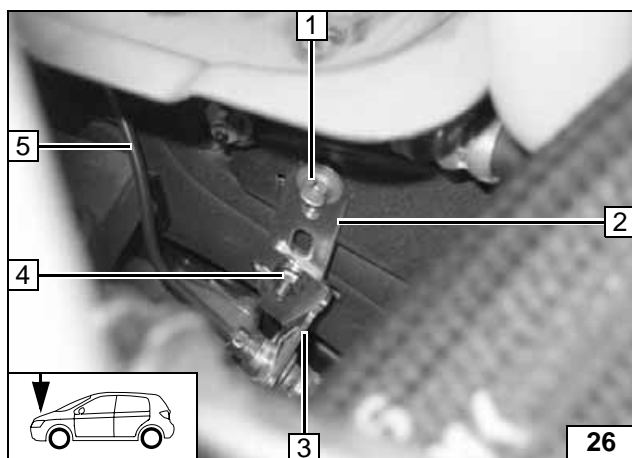

Remove bracket **3** of hydraulic line **5** and mount as shown. Original vehicle bolt **1** will be reused

- 2 Perforated bracket
- 3 M6x16 bolt, M6 flanged nut


Reposi-
tioning
hydraulic
line

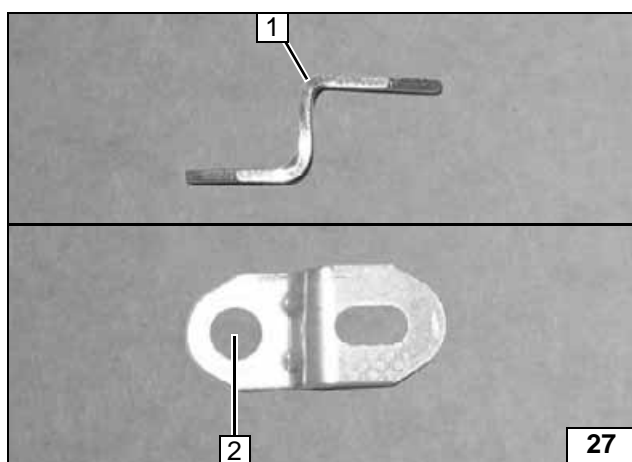

2.4 liter gasoline engine only


Bend angle bracket by approx. 90° at position 1. Drill out to 10.5 mm dia. at position 2.

Preparing
angle
bracket

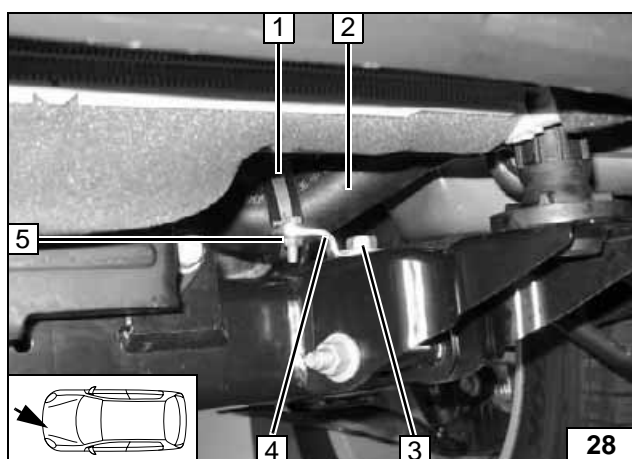


- 1 Rubber-coated pipe clamp, 48 mm dia.
- 2 Coolant hose
- 3 Original vehicle bolt
- 4 Prepared angle bracket
- 5 M6x20 bolt, M6 flanged nut

Reposi-
tioning
coolant
hose

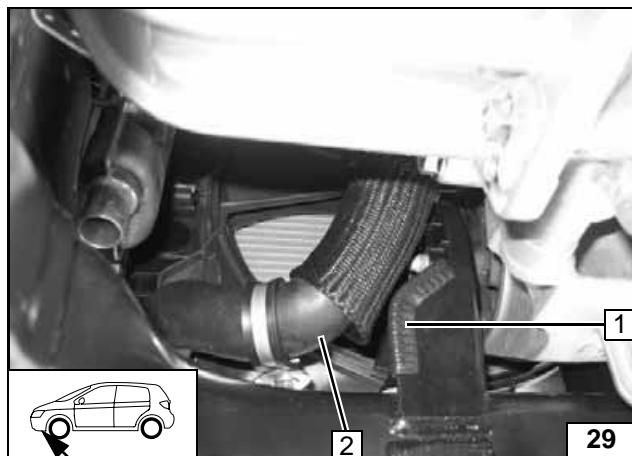

- 1 80 mm edge protection
- 2 Coolant hose


Installing
edge
protection

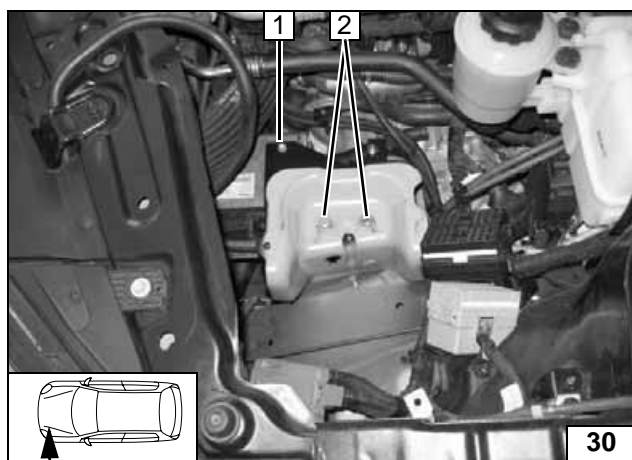

Installing heater unit


- 1 Preassembled heater unit
- 2 Loosely mount M8x30 bolt

Installing
heater unit

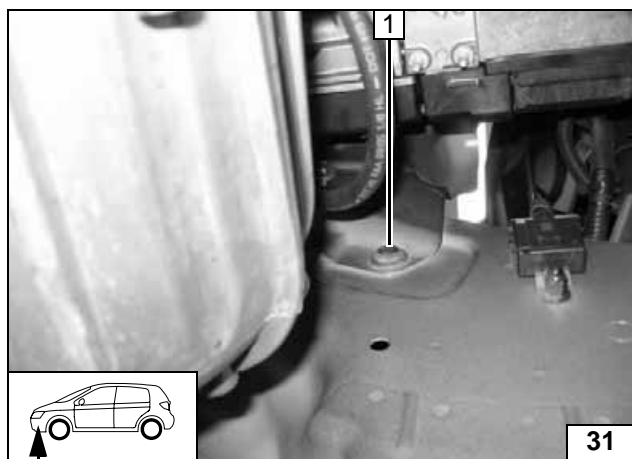


Remove original vehicle screw 1 and discard.

Installing
bracket

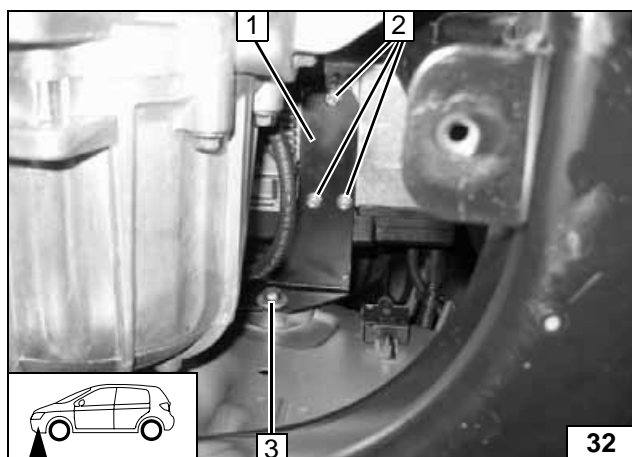

- 1 Bracket part 2
- 2 M6 flanged nut [3x]
- 3 M8x40 bolt, spring lockwasher, large diameter washer


Installing
bracket

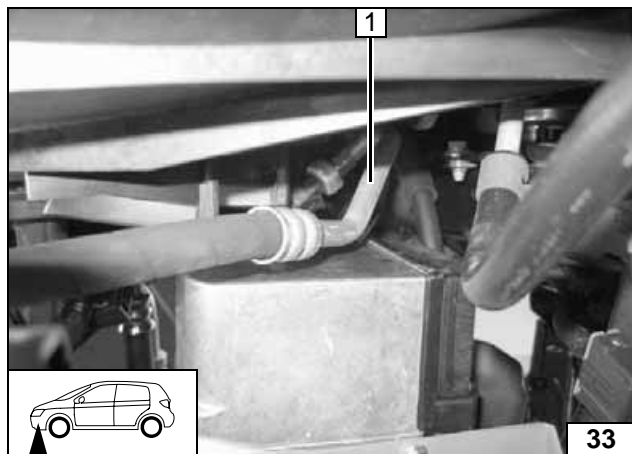

Ensure sufficient spacing to neighboring components, especially to A/C line 1; correct if necessary.




**Aligning
heater unit**

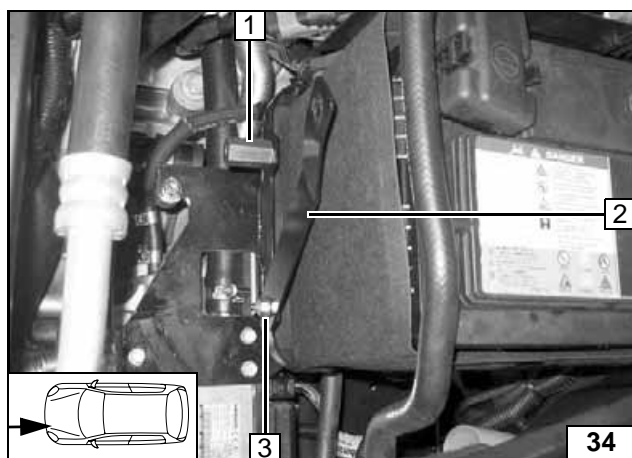

Repositioning control unit for gasoline engine only


- 1 30 mm spacer nut, spring lockwasher on existing stud bolt
- 2 Strut
- 3 Flanged nut on existing stud bolt

**Reposi-
tioning
control
unit**

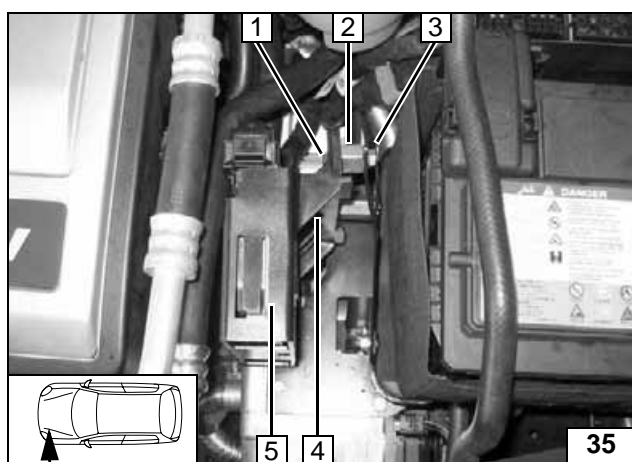

- 1 M6x30 bolt, large diameter washer
- 2 Spacer nut, 15 mm
- 3 Flanged nut
- 4 M6x16 bolt, spring lockwasher, large diameter washer
- 5 Control unit

**Reposi-
tioning
control
unit**



Coolant connection for diesel engine

WARNING!


Tighten all hose clamps to $2.0 + 0.5$ Nm.

Any coolant running off should be collected using an appropriate container!





Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties.

Position hose clamps and spring band clamps so that no other hose can be damaged.


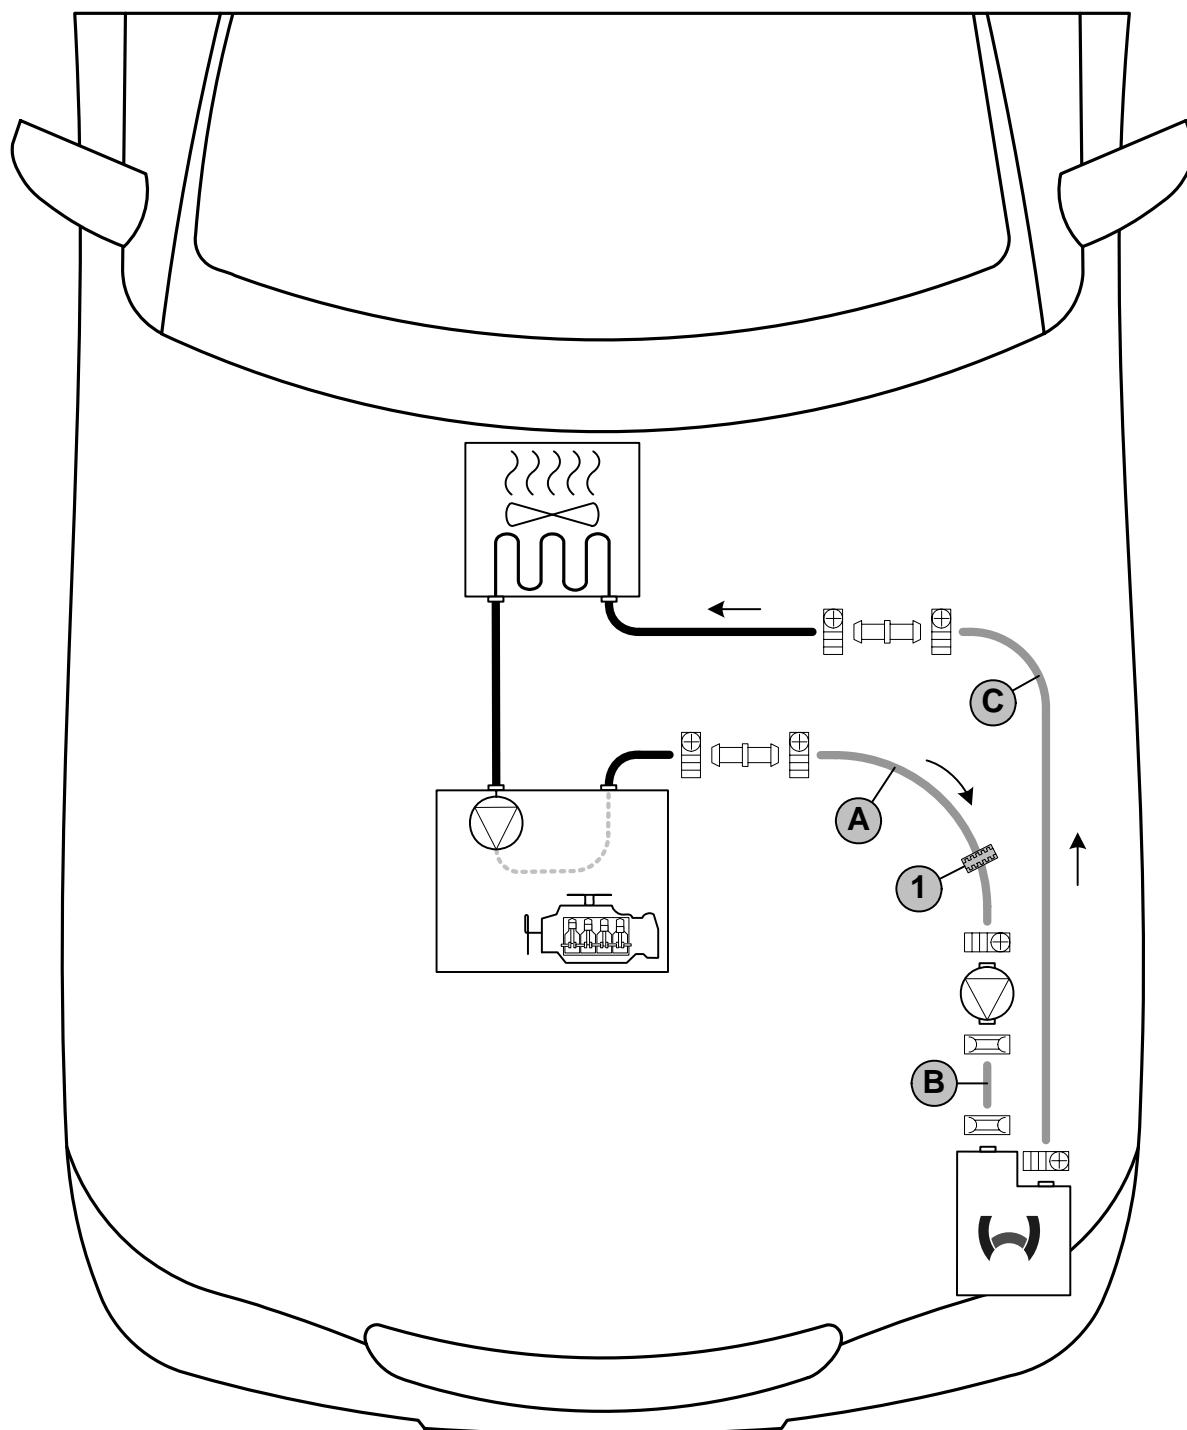
The connection should be "inline" based on the following diagram:



Coolant routing diagram

All spring clips without a specific designation  = 27 mm dia. All connecting pipes  = Ø 18x20. All hose clamps without a specific designation  = 20-27 mm dia 1 = Black (sw) rubber isolator .




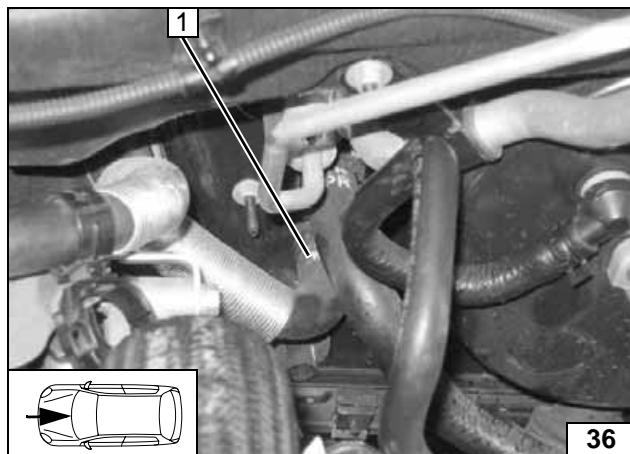

Pull off hose between engine outlet and heat exchanger inlet 1 on heat exchanger.



Cutting point

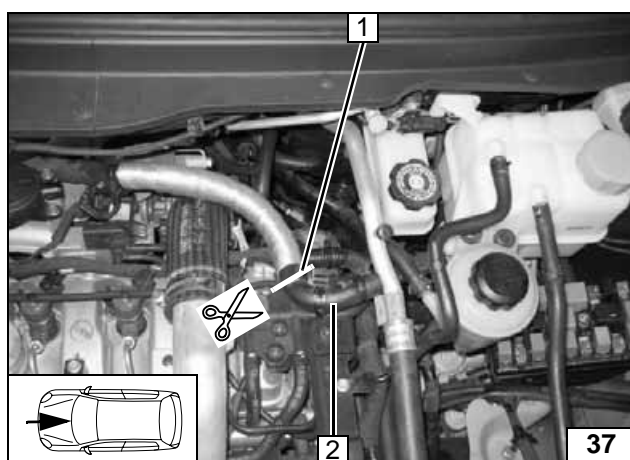


Push back heat guard.

- 1 Cutting point
- 2 Hose section of heat exchanger inlet




Cutting point

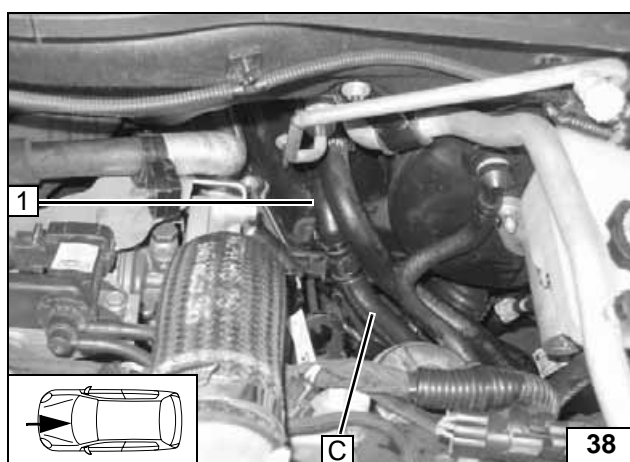

- 1 Hose on heat exchanger inlet





**Con-
nection on
heat
exchanger
inlet**

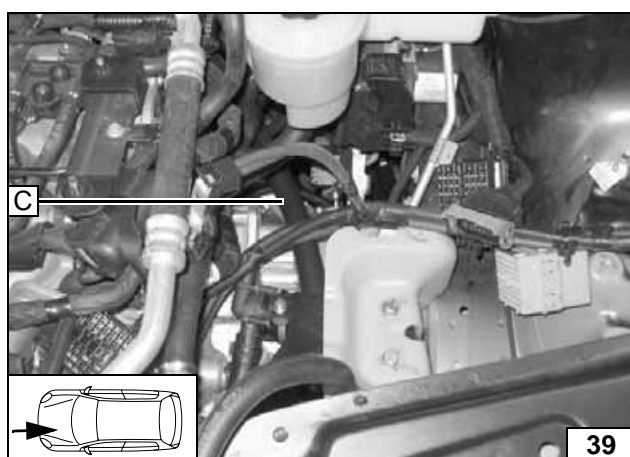


When installing the coolant hose, ensure sufficient spacing to the vehicle gear shift mechanism.




**Routing in
engine
compartment**

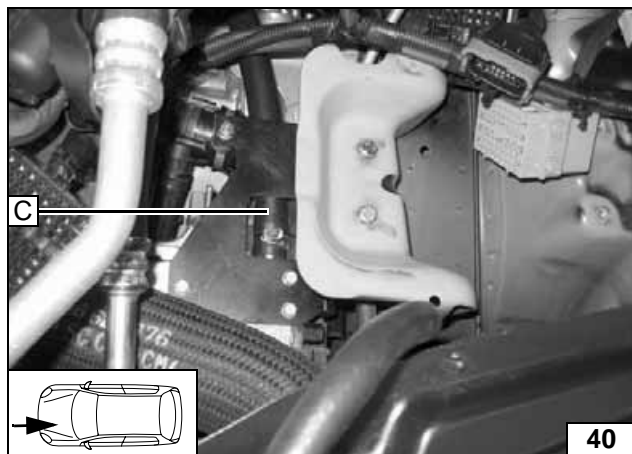

Con-
nection on
heater unit

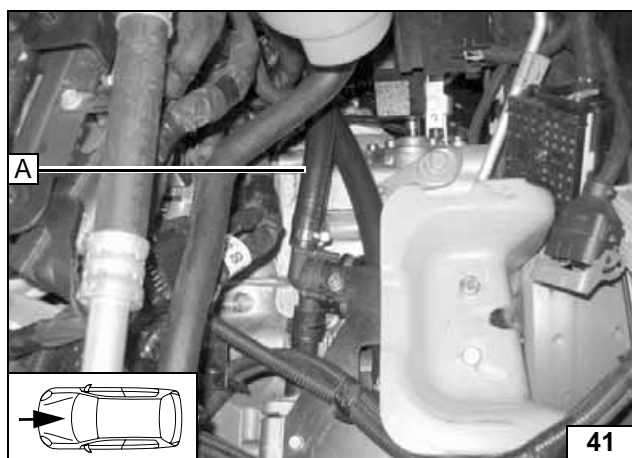

Con-
nection on
heater unit

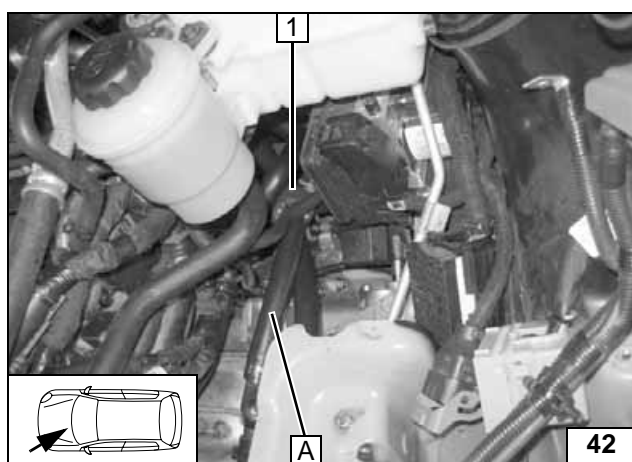


When installing the coolant hoses, ensure sufficient spacing to the gear shift mechanism.

1 Position black (sw) rubber profile



Routing in
engine
compartment

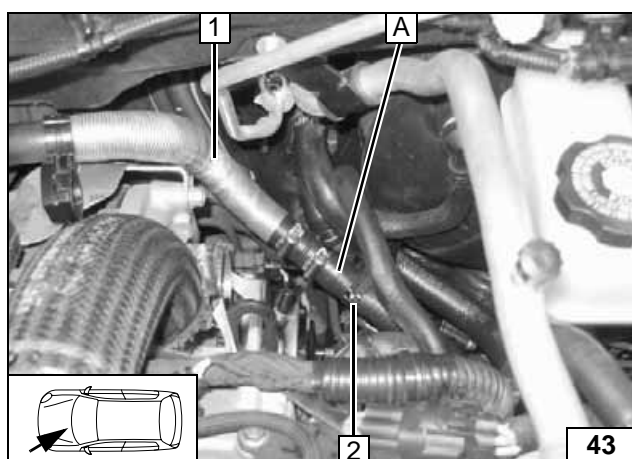


Before connecting, fill the coolant hoses with coolant.

1 Hose of engine outlet
2 Spacer bracket



Con-
nection to
engine
outlet



Coolant connection for gasoline

WARNING!


Tighten all hose clamps to $2.0 + 0.5$ Nm.

Any coolant running off should be collected using an appropriate container!


Install hoses so that they are kink-free. Unless specified otherwise, always fasten using cable ties.



Position hose clamps and spring band clamps so that no other hose can be damaged.

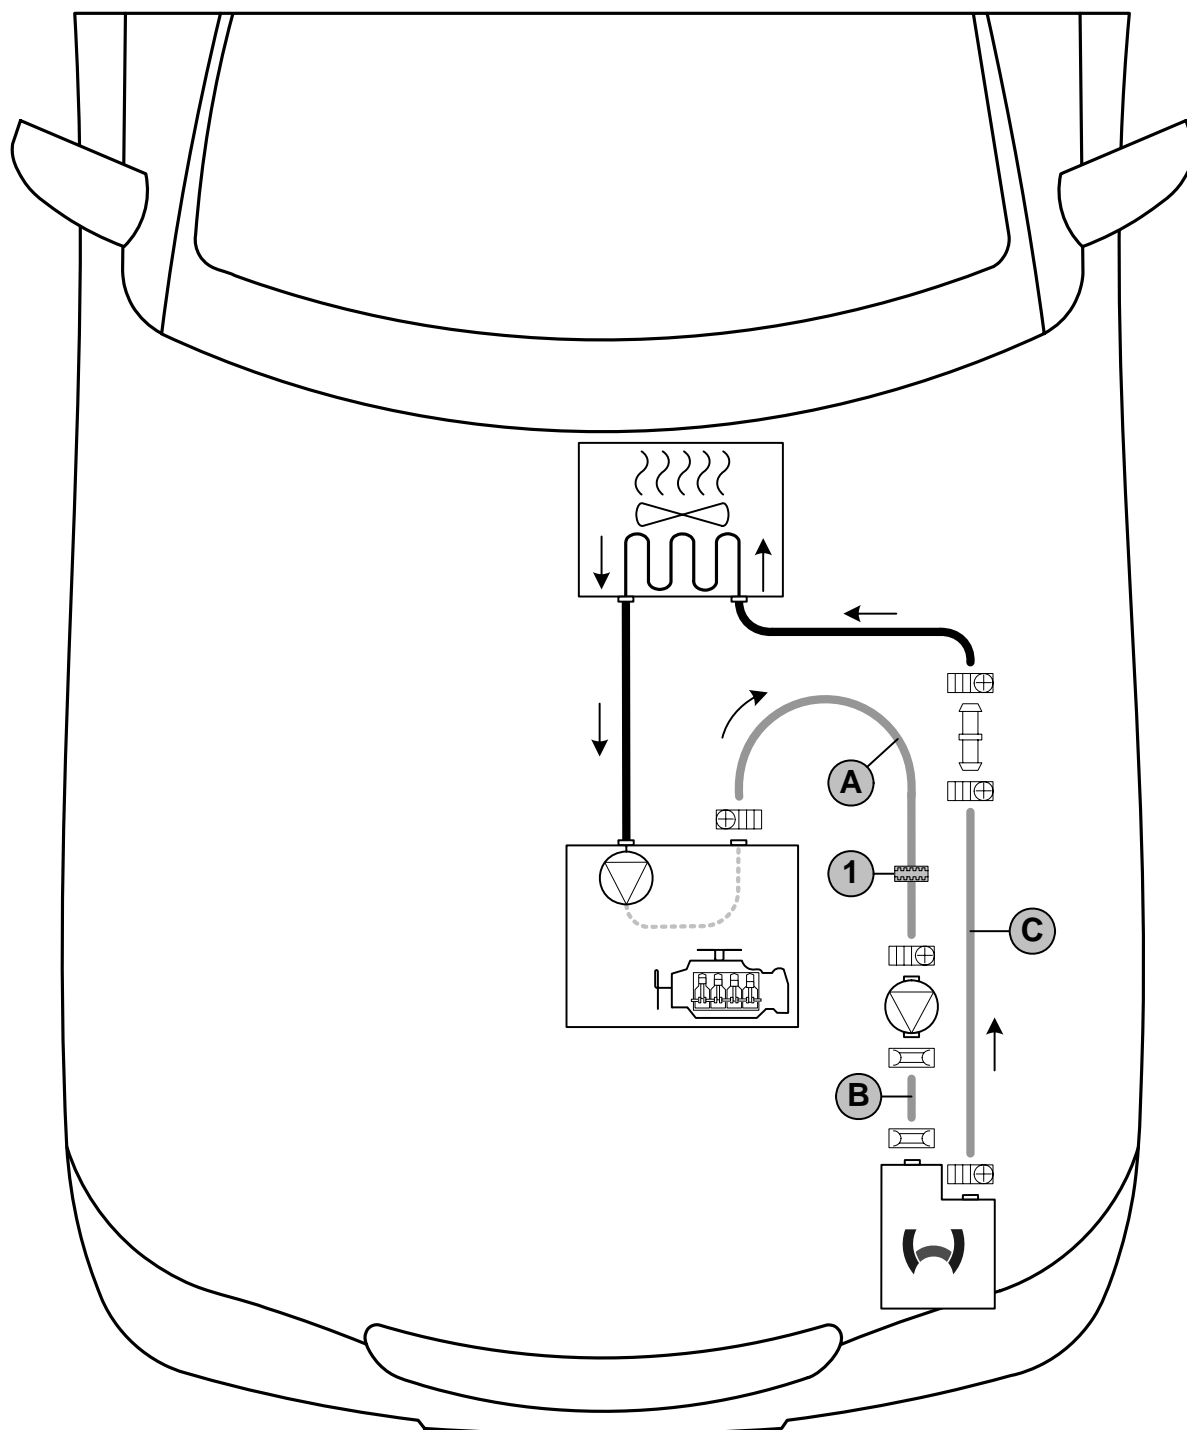The connection should be "inline" based on the following diagram:





Coolant routing diagram

All spring clips without a specific designation  = 27 mm dia. All connecting pipes = dia. 18x20.

All hose clamps without a specific designation  = 20-27 mm dia 1 = Black (sw) rubber isolator 




Opel Antara

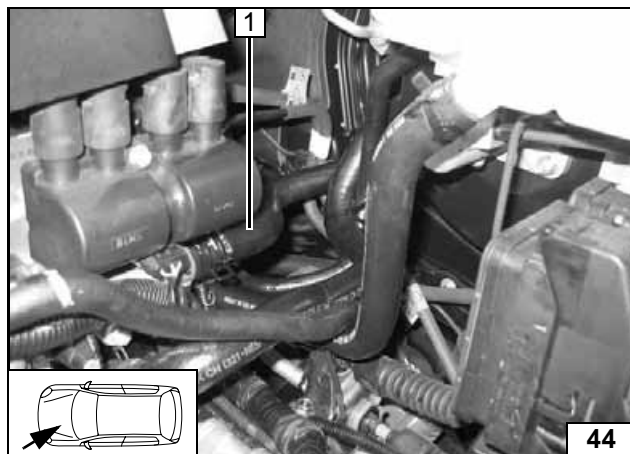

Disconnect original vehicle hose 1 from connection piece of engine outlet.




Cutting point

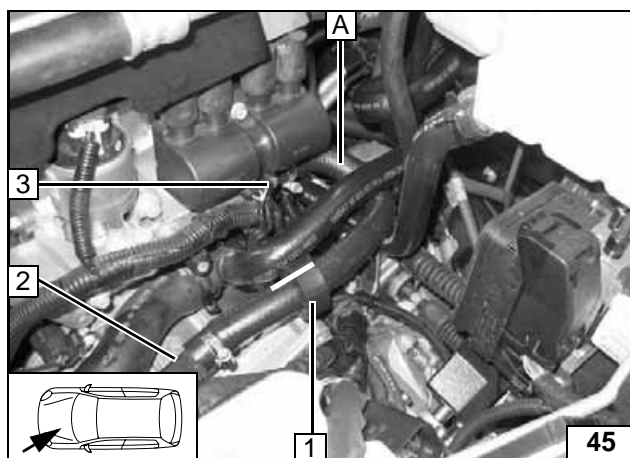

- 1 Black (sw) rubber isolator
- 2 Connection piece of circulating pump
- 3 Connection piece for engine outlet


Connecting hose A

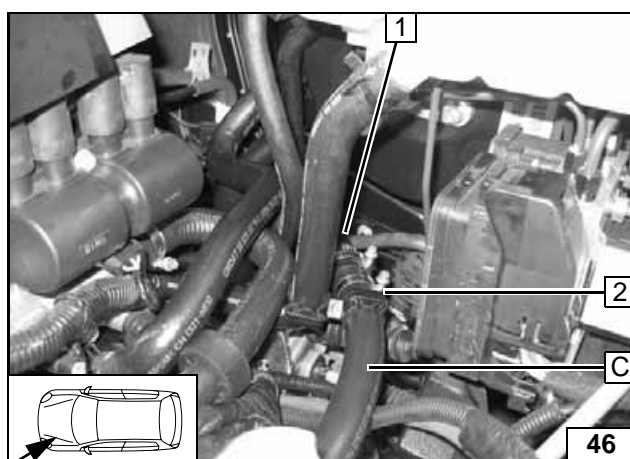

Before connecting, fill the coolant hoses with coolant.


- 1 Hose on heat exchanger inlet
- 2 Spacer bracket

**Con-
nection to
heat
exchanger**

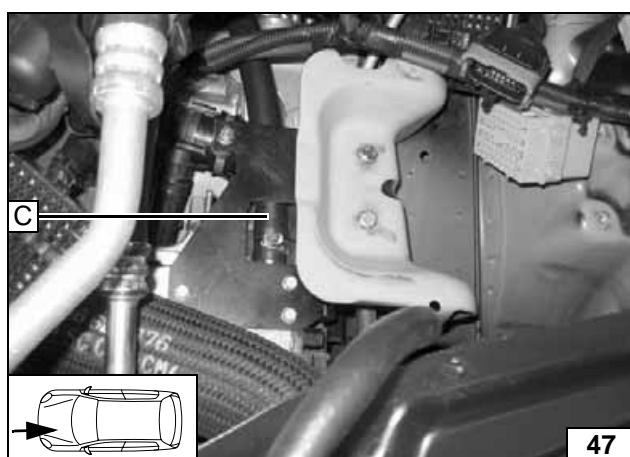

When installing the coolant hoses, ensure sufficient spacing to the gear shift mechanism.

**Con-
nection to
heater unit
outlet**



Fuel Connection

CAUTION!

Open the vehicle's fuel tank cap, ventilate the tank and then re-close the tank lock.


Catch any fuel running off with an appropriate container.

Install fuel line and metering-pump wiring harness so that they are protected against stone impact. Unless specified otherwise, always fasten using cable ties.

Mount the fuel line and wiring harness with rub protection on sharp edges.


WARNING!

The fuel line and wiring harness are routed to the metering pump in as shown in the wiring harness routing diagram.

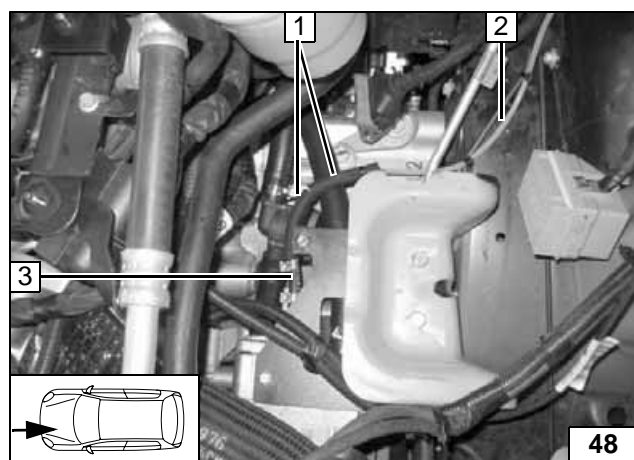

- 1 Included hose section as scuff guard [2x]
- 2 Mecanyl fuel line
- 3 Hose section, 10 mm dia. hose clamp [2x]


Con-
nection on
heater unit

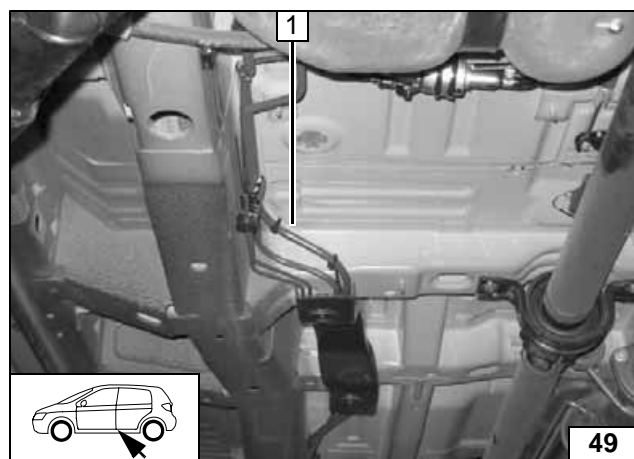

Diesel engine only

- 1 Mecanyl fuel pipe and metering pump cable harness

Installing
lines


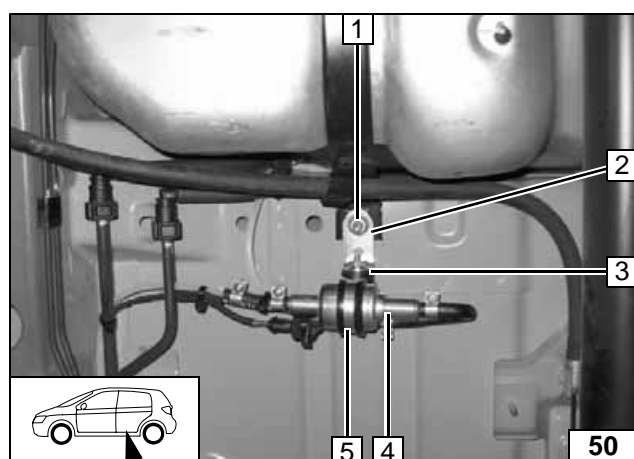


Ensure proper installation position of metering pump 4, see "Installation Instructions".
Installation location in front of vehicle fuel tank!

- 1 Original vehicle nut
- 2 Angle bracket
- 3 Silent block, flanged nut [2x]
- 5 Rubber-coated pipe clamp



Installation
location of
metering
pump

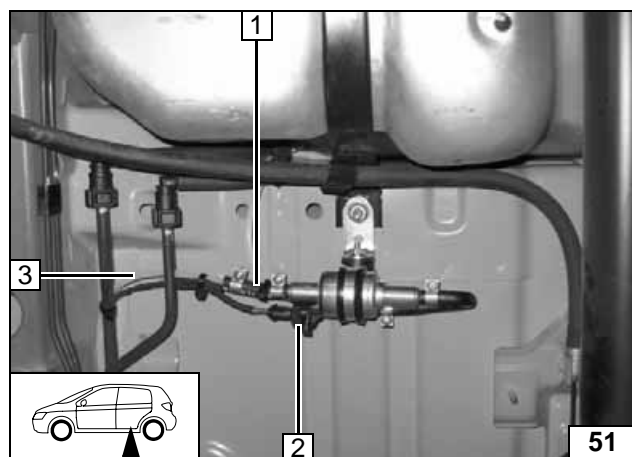


Fuel line **3** from heater unit on pressure side of metering pump [side with connector].

- 1** Hose section, 10 mm dia. hose clamps [2x].
- 2** Wiring harness of metering pump, connector mounted




Installing metering pump

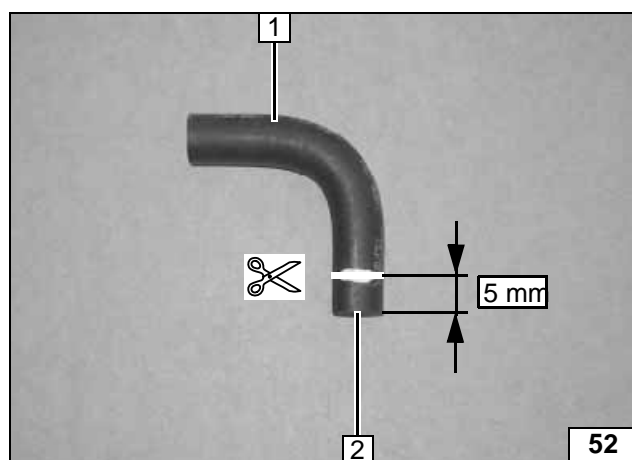

- 1** Separate 90° molded hose at marking
- 2** Discard section


Preparing fuel standpipe

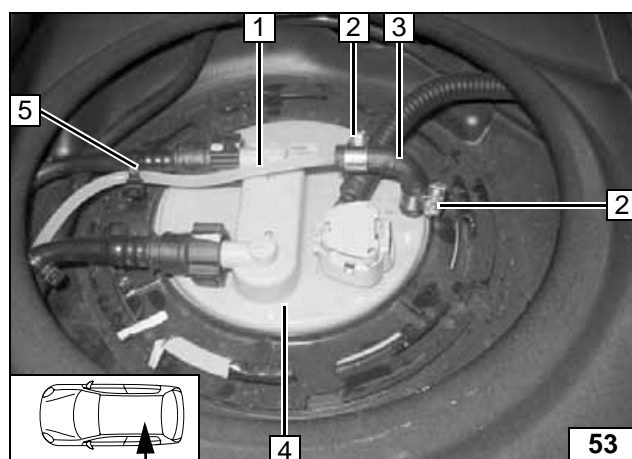

Cut closure off existing removal connection piece and push on short end of 90° molded hose **3**.

- 1** Fuel line
- 2** 10 mm dia. hose clamp [2x]
- 4** Fuel sender
- 5** Cable tie

Removing fuel


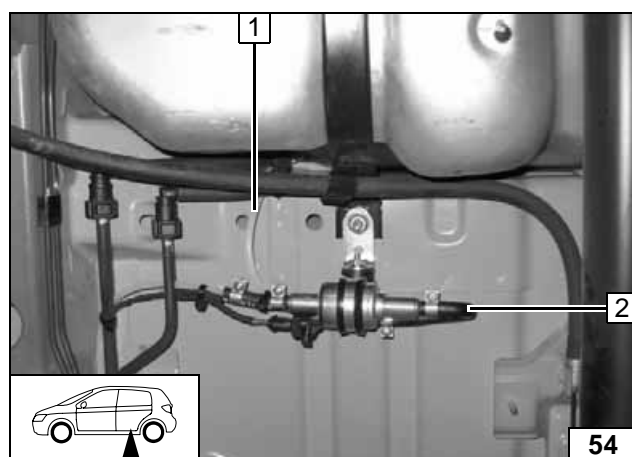


Fuel line **1** from fuel standpipe on intake side of metering pump [side without connector]. Check the position of the components; adjust if necessary. Check that they have free clearance.


- 2** 180° molded hose, 10 mm dia. hose clamp [2x]



**Con-
nection to
metering
pump**

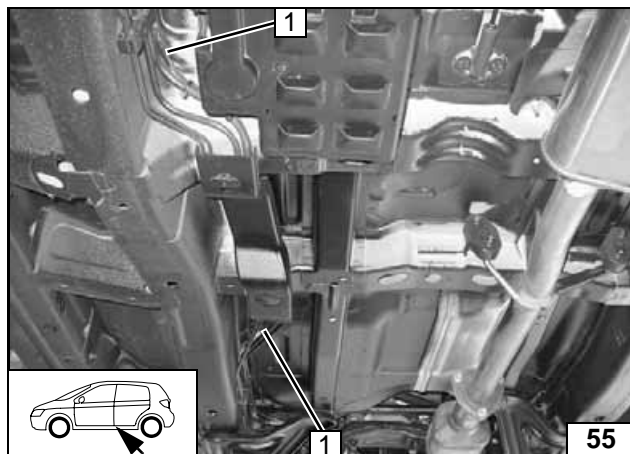
**Gasoline engine only**

- 1 Mecanyl fuel pipe and metering pump cable harness

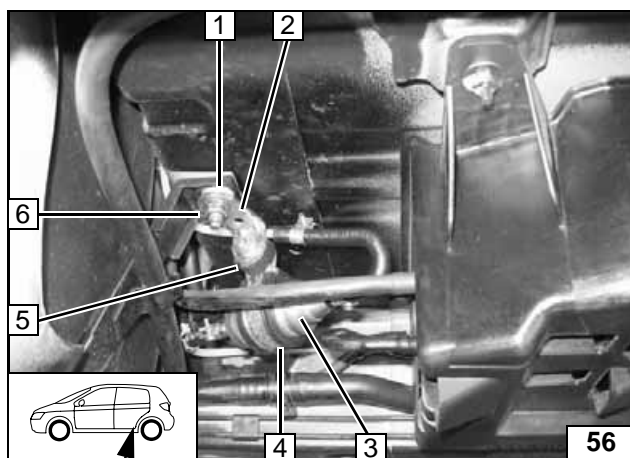Installing lines


Ensure proper installation position of metering pump **3**, see "Installation Instructions".
Installation location in front of vehicle fuel tank!

- 1 5 mm shim
2 Angle bracket
4 Rubber-coated pipe clamp
5 Silent block, flanged nut [2x]
6 Original vehicle nut

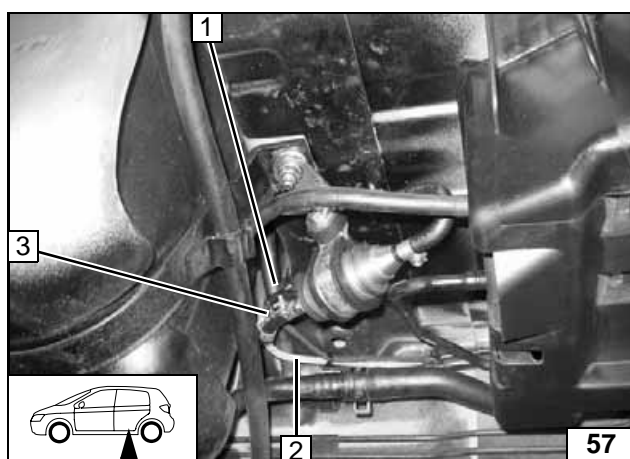**Installation location of metering pump**



Connect fuel line **2** from heater unit to pressure side of metering pump [side with connector].

- 1 Wiring harness of metering pump, connector mounted
3 Hose section, 10 mm dia. hose clamps [2x].

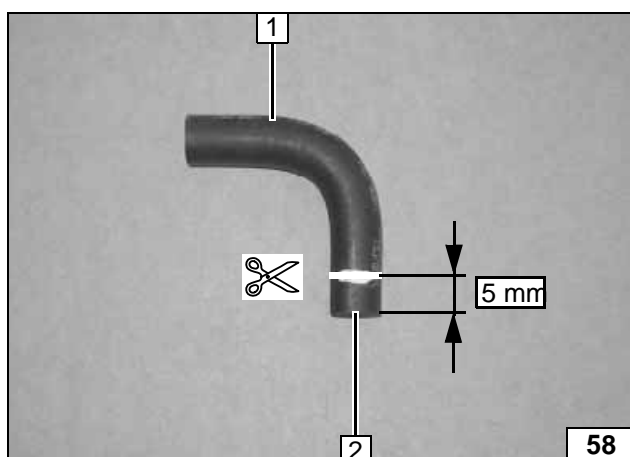**Installing metering pump**

- 1 Separate 90° molded hose at marking
2 Discard section

Preparing fuel standpipe

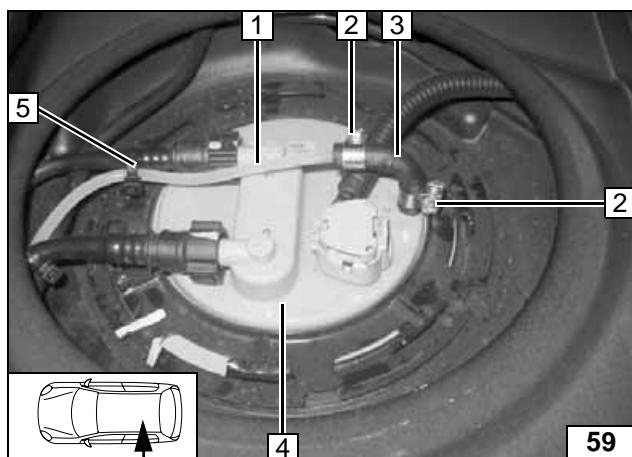


Cut closure off existing removal connection piece and push on short end of 90° molded hose 3.

- 1 Fuel line
- 2 10 mm dia. hose clamp [2x]
- 4 Fuel sender
- 5 Cable tie



**Removing
fuel**


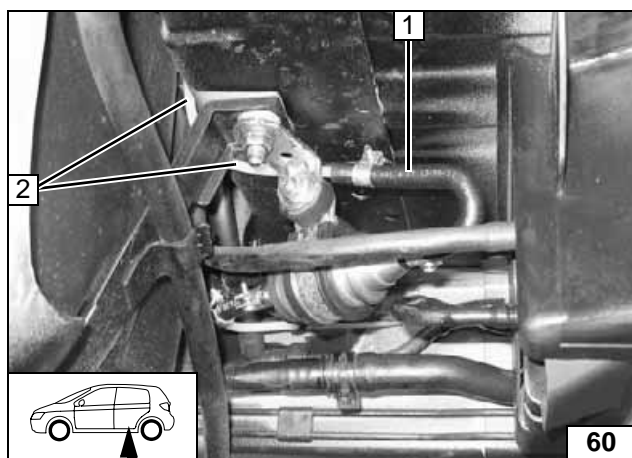


Fuel line 2 from fuel standpipe on intake side of metering pump [side without connector]. Check the position of the components; adjust if necessary. Check that they have free clearance.

- 1 180° molded hose, 10 mm dia. hose clamp [2x]




**Con-
nection to
metering
pump**

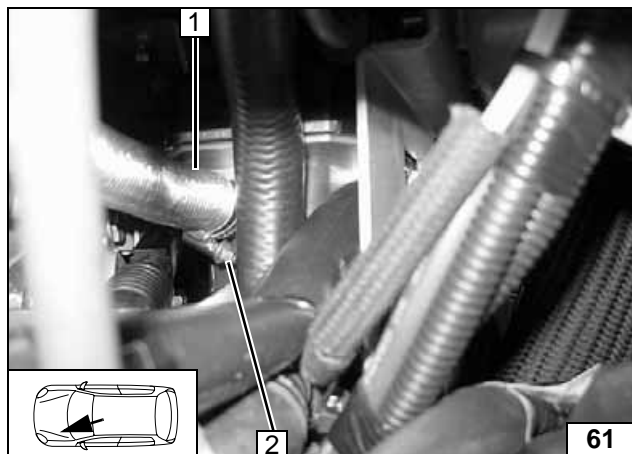

Combustion air



- 1 Combustion air pipe
- 2 Hose clamp

Installing combustion air pipe

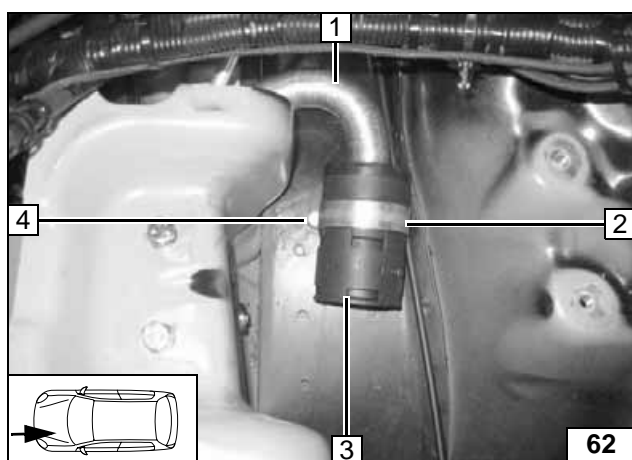

- 1 Combustion-air intake pipe
- 2 48 mm dia. p-clamp; rubber coating removed
- 3 Combustion-air intake muffler
- 4 Existing hole, M6 rivet nut, M6x20 bolt, spring lock washer

Installing muffler

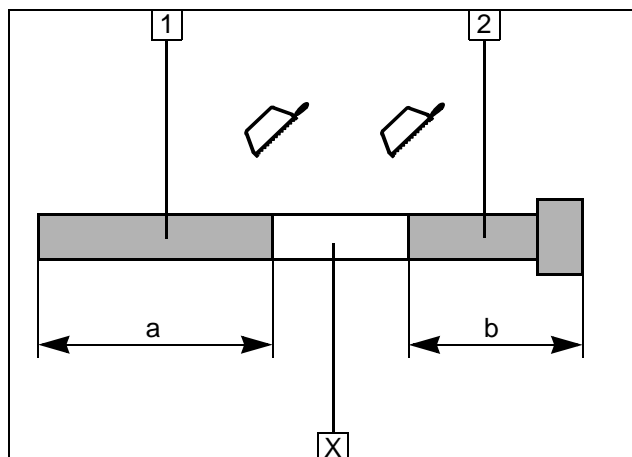


Exhaust system

- 1 Exhaust pipe
a = 330 mm
- 2 Exhaust end section
b = 120 mm

Discard section X


Preparing
exhaust
pipe

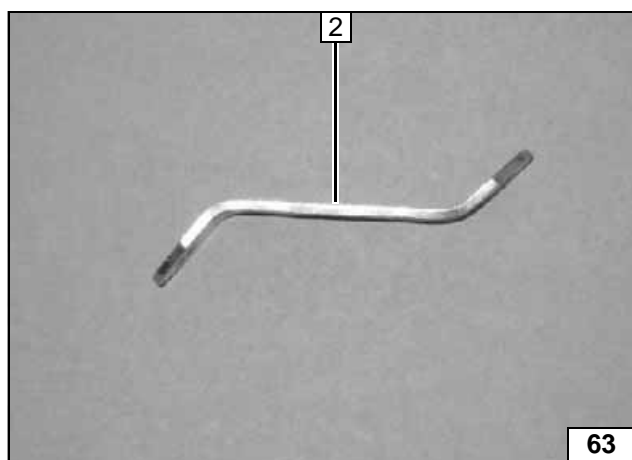

Bend perforated bracket provided approx. 45° [2x].




Preparing
perforated
bracket

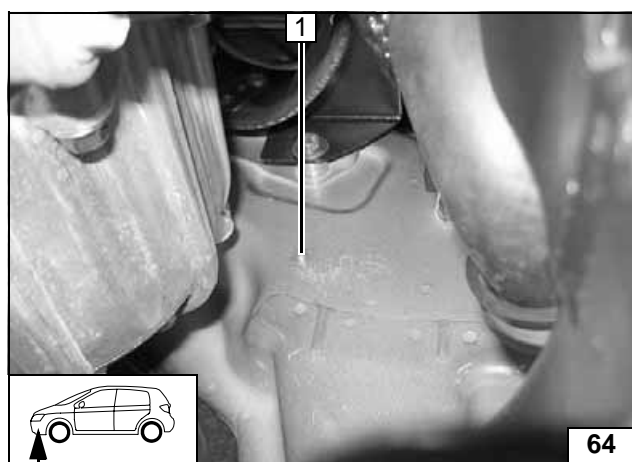



- 1 M6 rivet nut in existing hole

Installing
rivet nut

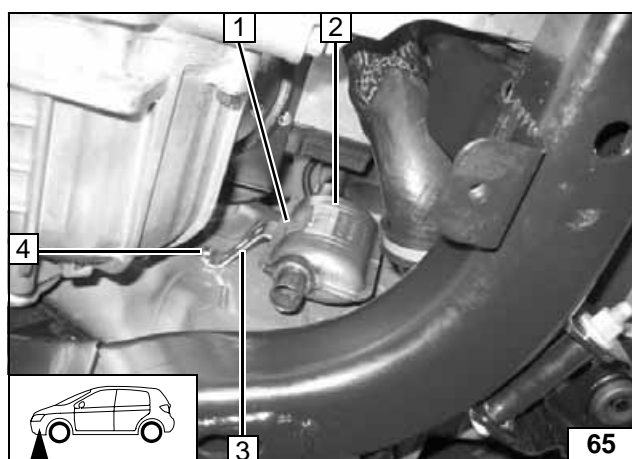


- 1 M6x20 bolt, flanged nut
- 2 Exhaust muffler
- 3 Perforated bracket
- 4 M6x20 bolt, spring lockwasher

Installing
exhaust
muffler

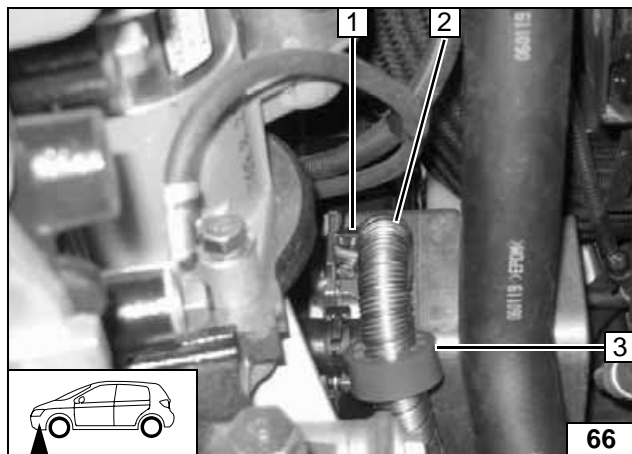

- 1 Hose clamp
- 2 Exhaust pipe
- 3 Push on red (rt) rubber isolator and position


**Installing
exhaust
pipe**

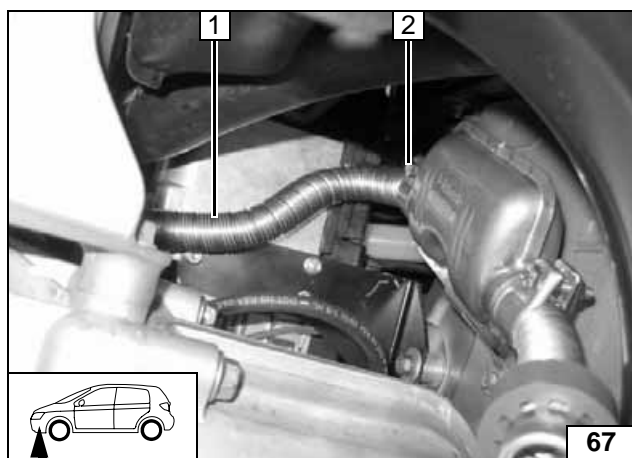

Shape exhaust pipe 1. Ensure sufficient distance to neighboring components.

- 2 Hose clamp

**Installing
exhaust
pipe**

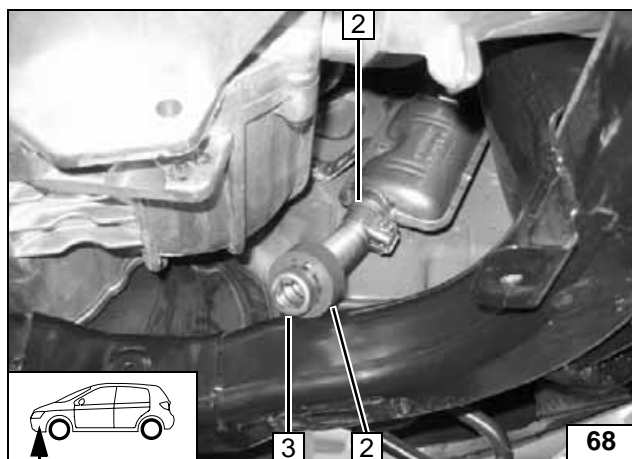

- 1 Hose clamp
- 2 Push on red (rt) rubber isolator and position
- 3 Exhaust end section

**Installing
exhaust
end
section**



Final Work

WARNING!


Reassemble the disassembled components in reverse order.

Check all hoses, hose, spring and Caillau clamps, as well as all electrical connections for firm seating.

Secure all loose cables using cable ties.

Only use manufacturer-approved coolant.

Spray the heater unit components with anti-corrosion wax (Tectyl 100K, Order No. 111329).

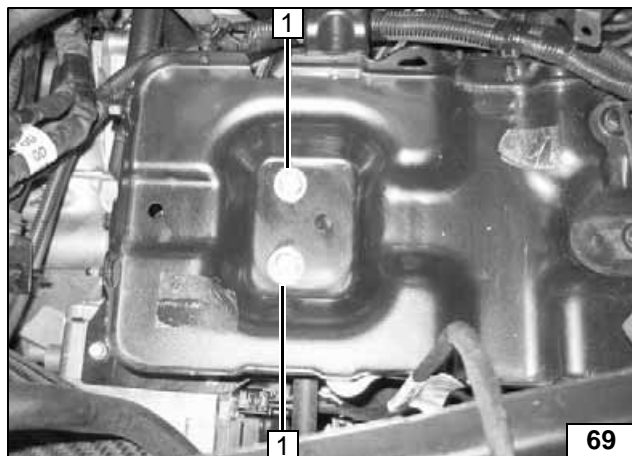

1 M8x30 bolt, spring lockwasher, flanged nut
[2x each]

Installing
battery
carrier

- Connect the battery
- Bleed and fill the coolant circuit according to the vehicle manufacturer's specifications.
- Set the digital timer.
- Set the manual air conditioning or automatic air conditioning according to the "operating instructions for the end customer".
- Check the proper operation of the additional heater, see the operating instructions/installation instructions.
- Attach the "Switch off additional heater before refueling" sticker to the left-hand B-pillar.



Webasto

Feel the drive

Webasto AG
Postfach 80 - 82132 Stockdorf, Germany - Hotline +49-
(0)1805-932278
Hotfax +49-(0)395-5592-353 - <http://www.webasto.de>

Operating Instructions for End Customer



Please remove page and add to the vehicle operating instructions.



Note:

We recommend matching the heating time to the driving time.


Heating time = driving time

Example:

For a driving time of approx. 20 min. (in one direction), we recommend not exceeding a switch-on time of 20 min.


If the summer/winter switch option has been installed, this must be switched in accordance with the time of year. The heater unit will then only switch on the vehicle fan to ventilate the vehicle interior in the position Winter  heat and in the position Summer .

Before parking the vehicle, make the following settings:

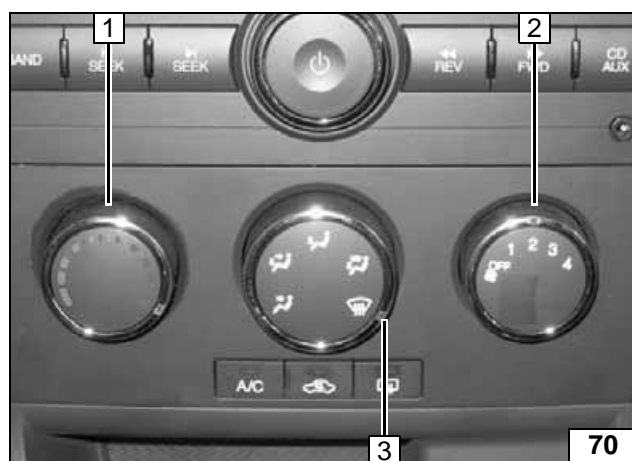

- 1 Set temperature to "max."
- 2 Set fan to level "1", or possibly "2"
- 3 Direct air outlet toward windshield

Manual air
con-
ditioning

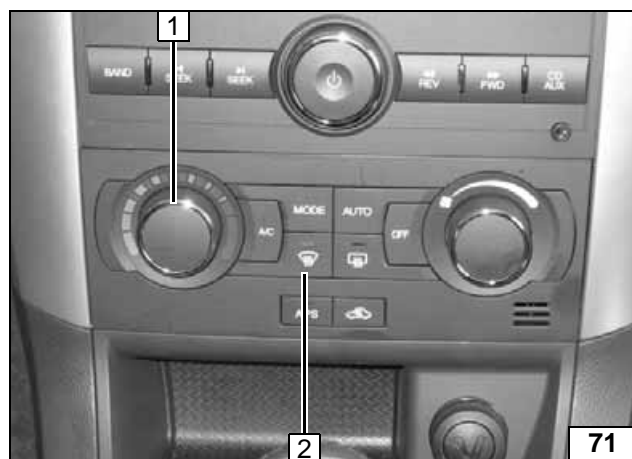

- 1 Set temperature to "max."
- 2 Air outlet to windshield

Automatic
air-
condition-
ing